


**REMOVAL AND INSTALLATION (Continued)**

**Blower Motor Speed Controller**

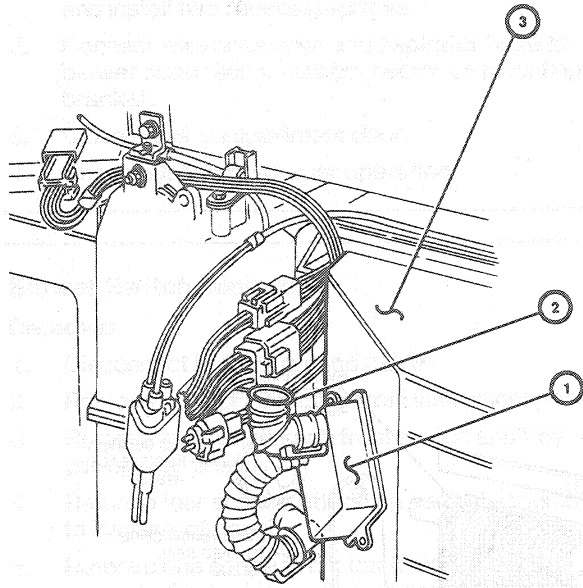

ITEM	DESCRIPTION
1	BLOWER MOTOR SPEED CONTROLLER AND ASPIRATOR ASSEMBLY
2	ASPIRATOR HOSE
3	A/C EVAPORATOR ASSEMBLY

CCL 3556-A

3. Remove two screws retaining blower controller to evaporator case and remove controller. Do not touch fins of controller until it has had sufficient time to cool.