


REMOVAL AND INSTALLATION (Continued)

Heater and Evaporator Installation, Manual

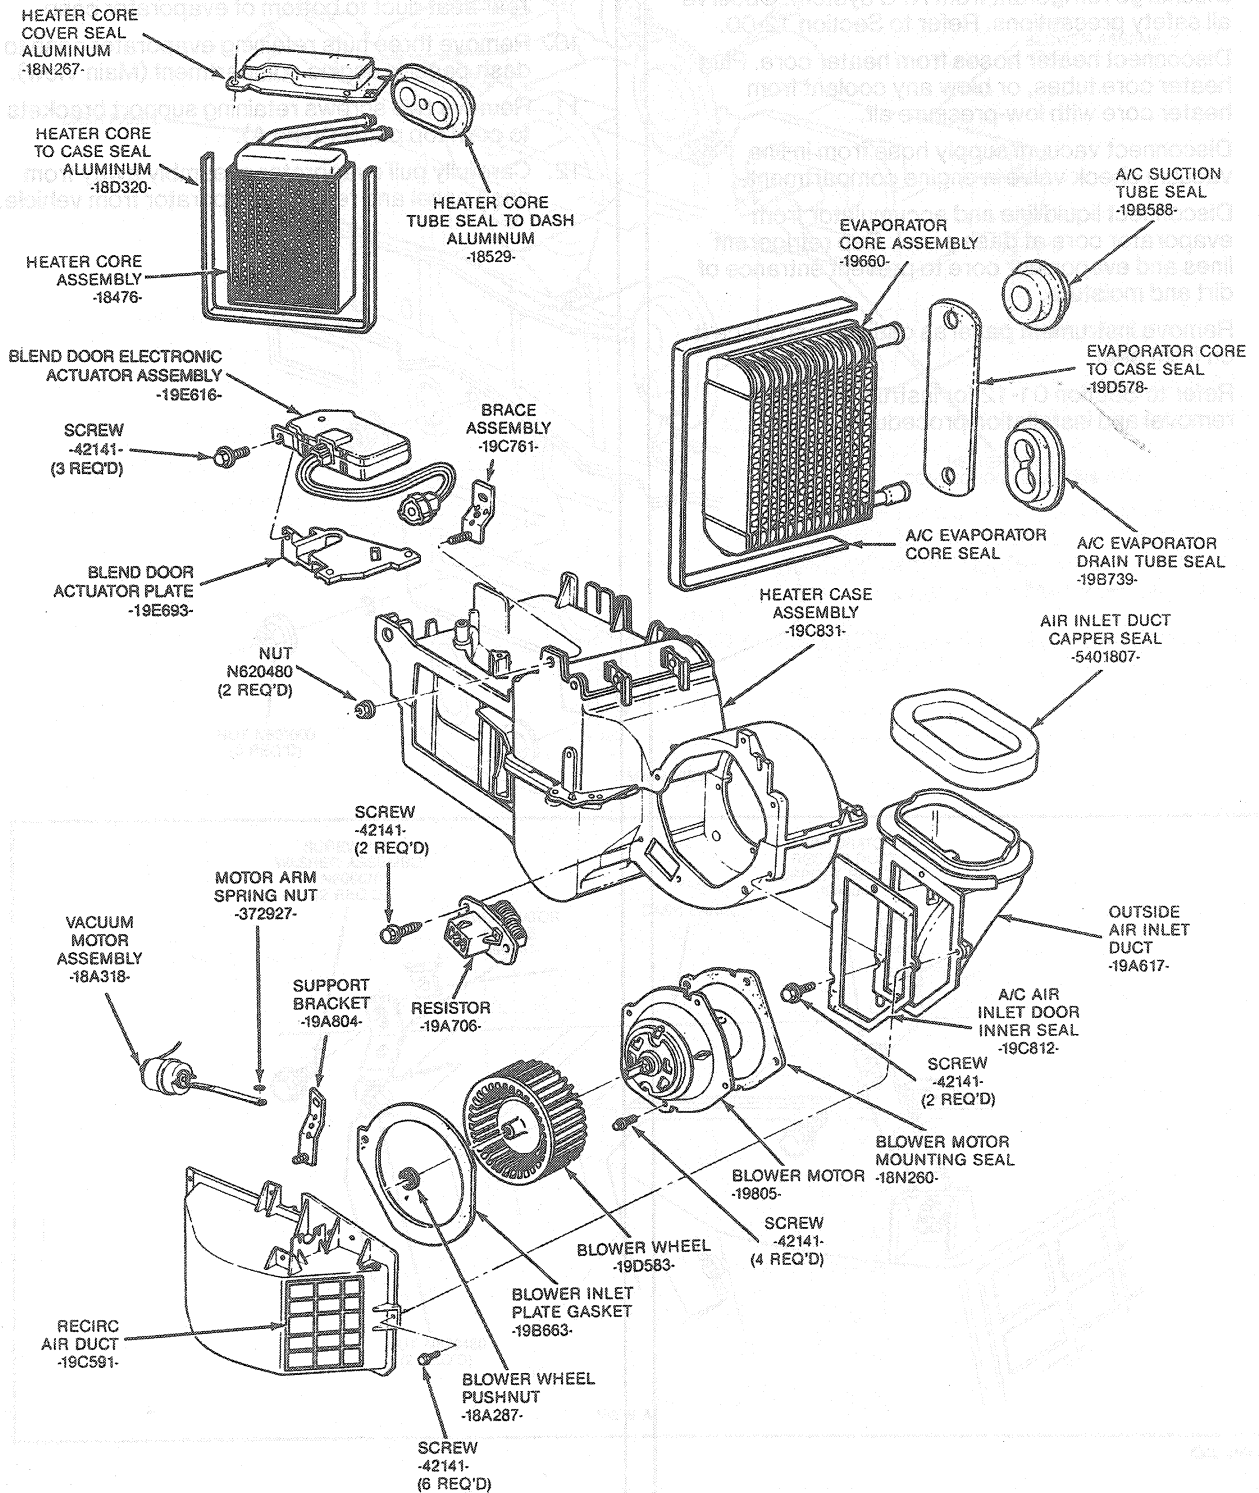

CCL 2615-E