


REMOVAL AND INSTALLATION (Continued)

Recirc Duct Removal from Evaporator Case, Manual

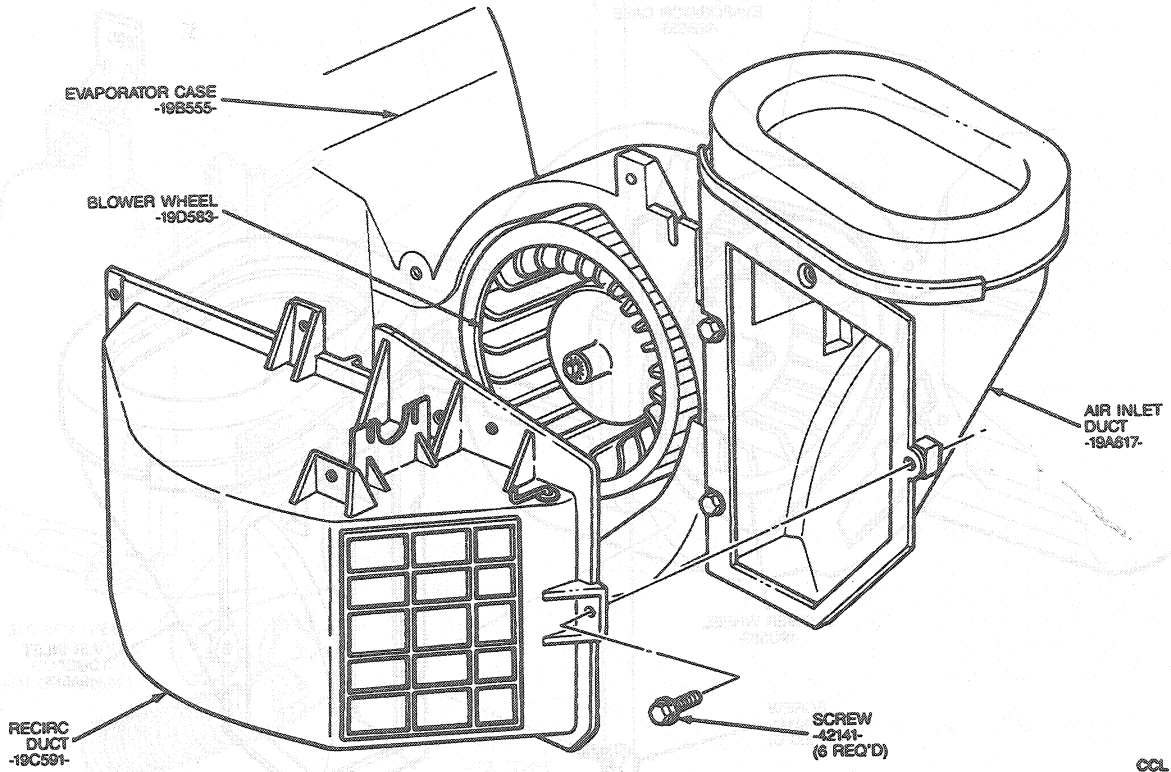

4. Remove two screws from air inlet duct and remove duct from evaporator case.