


REMOVAL AND INSTALLATION (Continued)

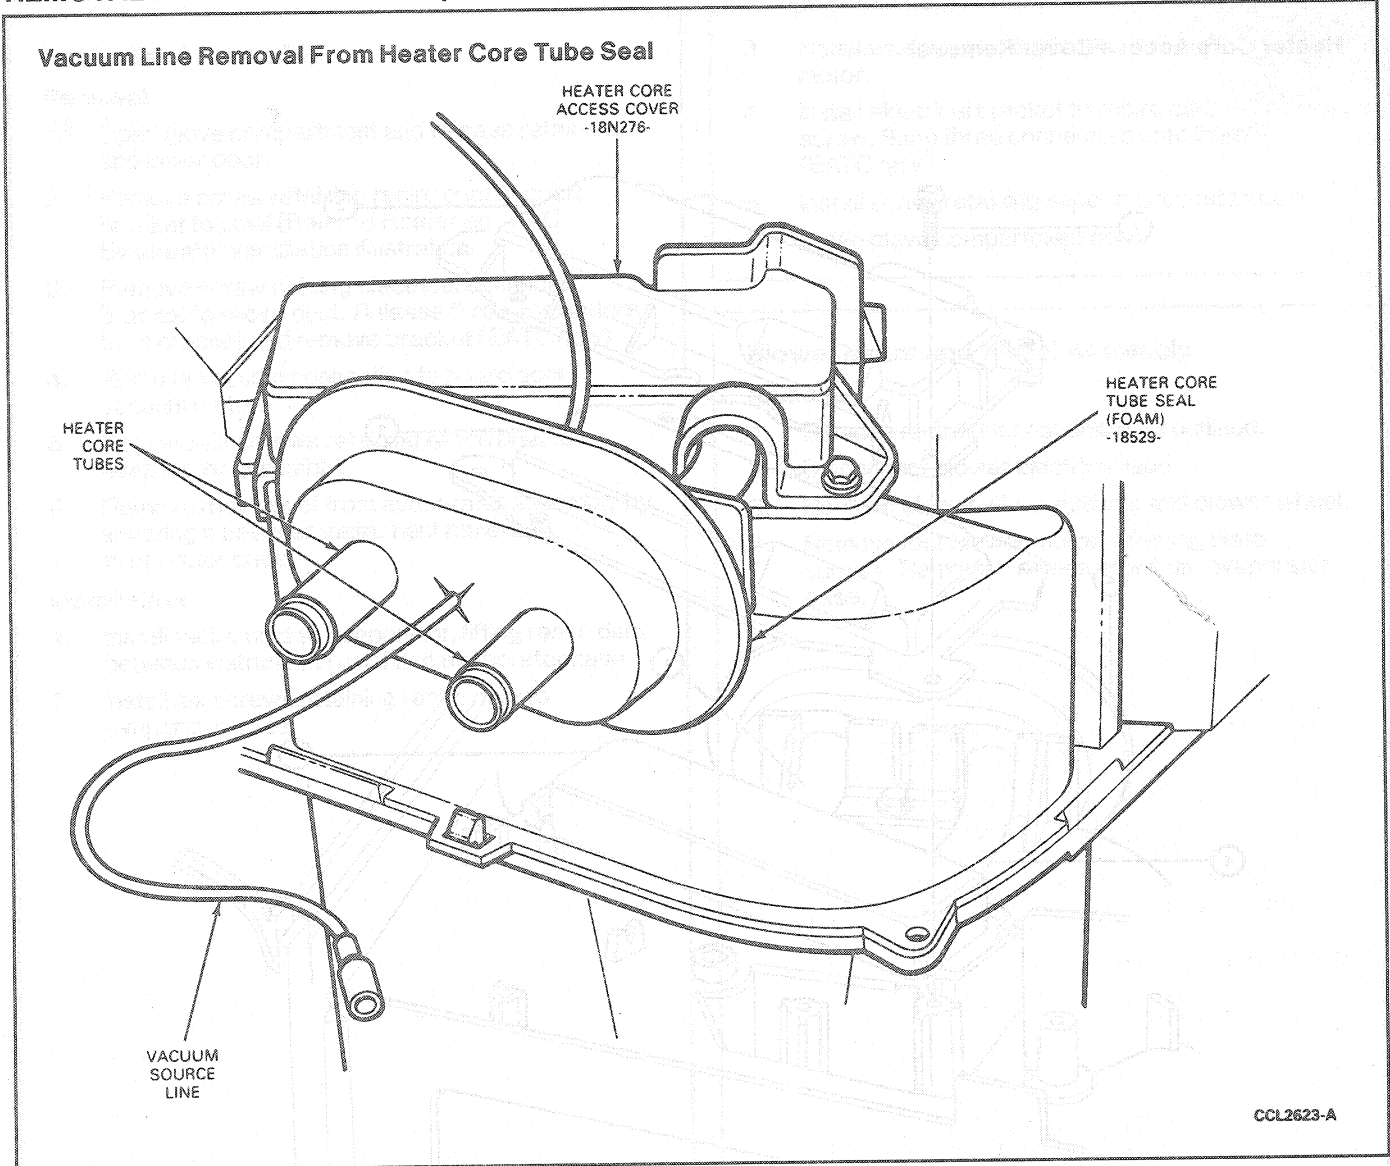

CCL2623-A

4. Remove seal from heater core tubes (refer to HEater and Evaporator, Manual illustration).
5. Remove three screws retaining blend door actuator (Refer to Electric Blend Door Actuator Attachment illustration) to evaporator case. Remove actuator (EATC only).

6. Remove four heater core access cover retaining screws, and remove access cover and seal from evaporator case.