
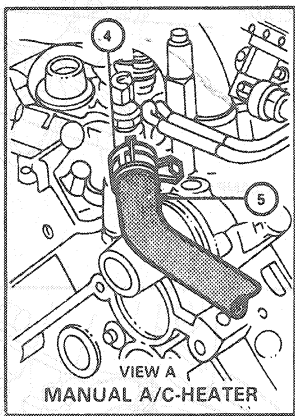


REMOVAL AND INSTALLATION (Continued)

Heater Hose Installation — 3.8L Engine

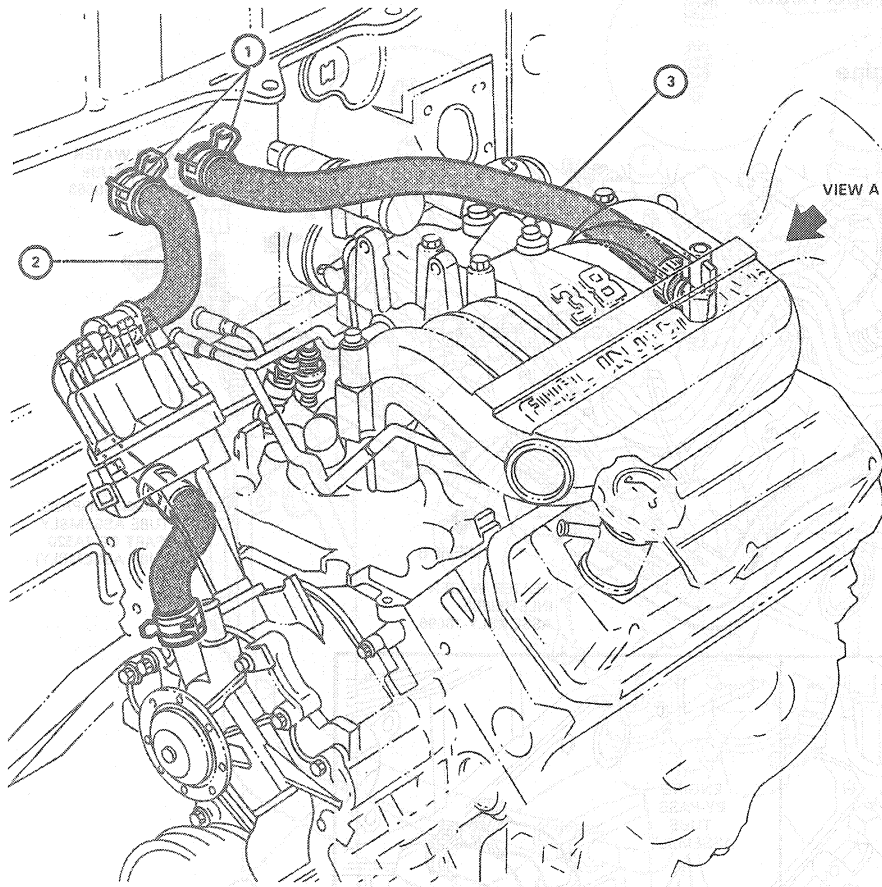

- ITEM DESCRIPTION**
- 1. CLAMP - 390761 (2 REQ'D)
 - 2. HEATER OUTLET HOSE - 18D663
 - 3. HEATER INLET HOSE - 18D376 (EATC ONLY)

- ITEM DESCRIPTION**
- 4. CLAMP - 390762 (1 REQ'D)
 - 5. HOSE - 18D334

CCL3029-F

Connect refrigerant to air conditioning system using new O-rings lubricate with clean specified refrigerant oil. At condenser, use following procedure for spring lock couplings.

CAUTION: Make sure correct type O-rings are installed on A/C fittings.

Leak test, evacuate and charge system following procedure. Observe safety precautions. Refer to Section 12-03.