


REMOVAL AND INSTALLATION (Continued)

Compressor Shaft Seal Identification

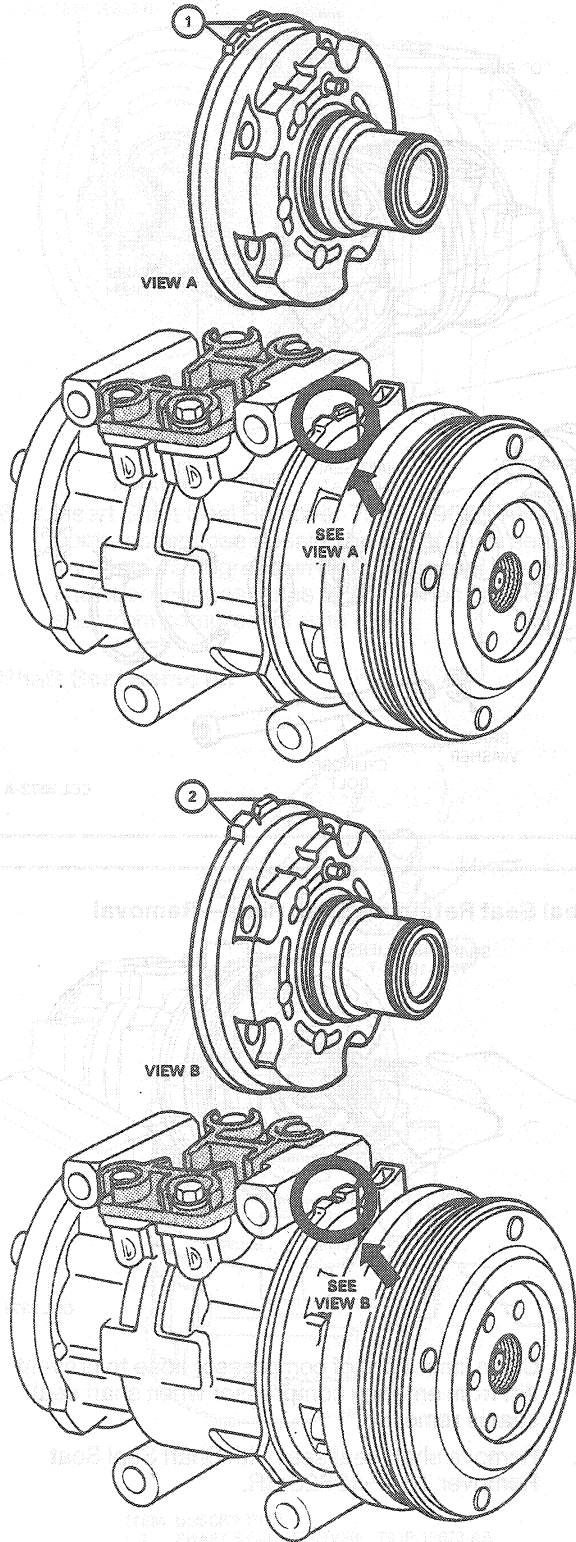


- | ITEM | DESCRIPTION   |
|------|---|
| 1.   | 2 EQUAL SIZE TABS INDICATE OLD SHAFT SEAL DESIGN    |
| 2.   | 1 THICK & 1 THIN TAB INDICATE NEW SHAFT SEAL DESIGN |

CCL 4134-A

1. Clamp the compressor in a vise as shown and remove clutch hub as outlined.

Compressor Clamped in Vise for Disassembly

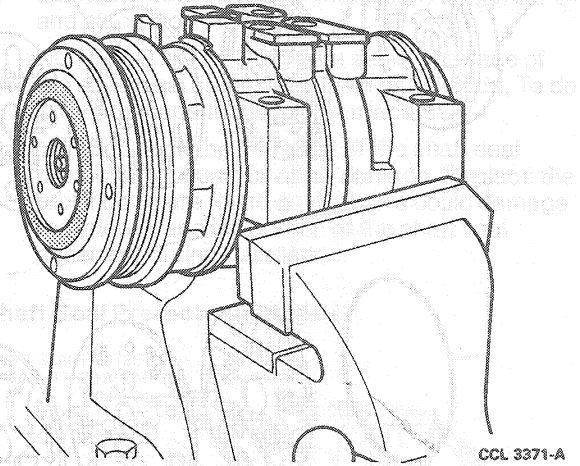

2. Clean compressor front hub area to remove any accumulation of oil and dirt.
3. Carefully remove felt and retainer from inside nose of compressor.

