

PARTS CROSS-REFERENCE


Base Part #	Part Name	Old Part Name
9002	Fuel Tank	
9092	Fuel Tank Support Strap	
9280	Fuel Gauge	
9291	Fuel Tube	
9A011	Fuel Tank Sender Filter	

(Continued)

Base Part #	Part Name	Old Part Name
9C385	Fuel Pump Locking Retainer Ring	
9F326	Low Fuel Level Warning Switch	
9F792	Fuel Injection Supply Manifold	

REMOVAL AND INSTALLATION

On some vehicles it may be necessary to remove the instrument panel to access the fuel gauge and low fuel warning indicator. Refer to the instrument panel removal and installation procedure for details.

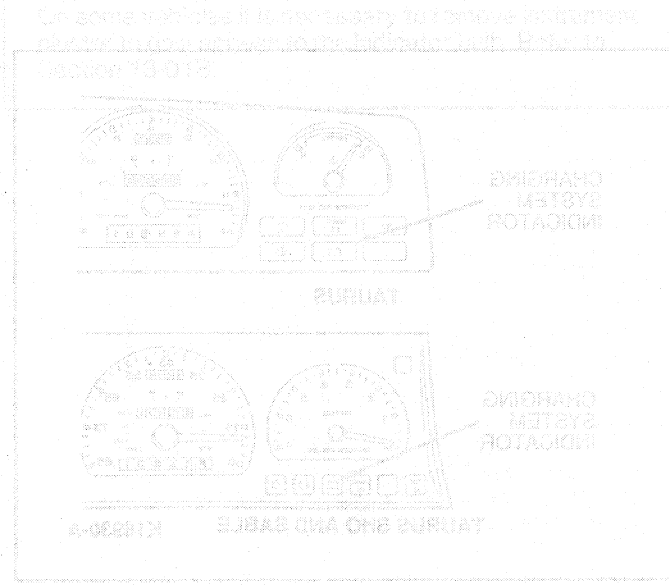

DESCRIPTION AND OPERATION

A red generator charge indicator is located in the instrument panel. This indicator glows when there is no generator output.

When the ignition switch contacts are closed (switch turned on), battery current flows through the charge indicator and the parallel resistor (COO ohm) to the regulator and the indicator comes on.

When the generator builds up enough voltage to energize a circuit in the voltage regulator, the charge indicator goes out.

