

SECTION 13-05 Tachometer, Oil Pressure, Coolant Temperature Gauges/Warning Indicators

SUBJECT	PAGE	SUBJECT	PAGE
DESCRIPTION AND OPERATION		REMOVAL AND INSTALLATION	
Magnetic Temperature Gauge.....	13-05-2	Coolant Temperature Sending Unit.....	13-05-8
Oil Pressure Indicator.....	13-05-2	Indicator Bulb.....	13-05-8
Tachometer.....	13-05-1	Oil Pressure Engine Unit Gauge.....	13-05-6
DIAGNOSIS AND TESTING		Tachometer.....	13-05-6
Engine Oil Pressure.....	13-05-3	SPECIAL SERVICE TOOLS	13-05-9
Oil Pressure Indicator.....	13-05-3	SPECIFICATIONS	13-05-8
PARTS CROSS-REFERENCE	13-05-9	VEHICLE APPLICATION	13-05-1

VEHICLE APPLICATION
Taurus / Sable.

DESCRIPTION AND OPERATION

The tachometer, gauge and warning indicator systems covered in this section are for conventional clusters only. For electronic instrument cluster applications, refer to Section 13-01A.

Tachometer

The tachometer is an electrically-operated instrument which indicates engine speed in revolutions per minute (rpm). The tachometer range is 0 to 7000 rpm, except Taurus SHO models which have a range of 0 to 8000 rpm.

The tachometer is mounted in the instrument cluster assembly. The schematic wiring diagram shows the tachometer system.

