

**DIAGNOSIS AND TESTING (Continued)**

ITEM NO.	CIRCUIT	DESCRIPTION
1	57	Ground
2	14	Headlamp

(Continued)

ITEM NO.	CIRCUIT	DESCRIPTION
3	54	Dome Lamp
4	19	Rheostat
5	296	Ignition

TK17225A

**PINPOINT TEST A: ELECTRONIC DIGITAL CLOCK FUNCTIONAL TEST**

TEST STEP		RESULT	ACTION TO TAKE
A1	<b>CLOCK FUNCTION</b> ● Turn ignition to RUN or ACC. ● Does display come on?	Yes	▶ GO to A2.
		No	▶ GO to B1.
A2	<b>DIMMING FUNCTION</b> ● Turn headlamps ON. ● Does display dim?	Yes	▶ GO to A3.
		No	▶ GO to B4.
A3	<b>SET TIME—HOURS</b> ● Depress H button and hold. ● Do hours advance?	Yes	▶ GO to A4.
		No	▶ REPLACE unit and VERIFY. GO to A1, Functional Test.
A4	<b>SET TIME—MINUTES</b> ● Depress M button and hold. ● Do minutes advance?	Yes	▶ Clock OK.
		No	▶ REPLACE unit and VERIFY. GO to A1, Functional Test.

TK 16948B

**PINPOINT TEST B: WIRING HARNESS CHECK SUBROUTINE B**

TEST STEP		RESULT	ACTION TO TAKE
B1	<b>POWER TO CLOCK—CHECK FUSE</b> ● Open vehicle door. ● Does dome lamp light?	Yes	▶ GO to B2.
		No	▶ CHECK fuse. VERIFY dome lamp works. GO to A1.
B2	<b>POWER TO CLOCK HARNESS CHECK</b> ● Put non-powered test lamp between vehicle ground and Circuit 54 on back of male clock connector. ● Does test lamp light?	Yes	▶ GO to B3.
		No	▶ Concern in Circuit 54, SERVICE and VERIFY clock operation. GO to A1.

