


**DIAGNOSIS AND TESTING**

Check system fuse before proceeding.

- Equipment: 12-volt test lamp or ohmmeter
- When necessary to trace and/or service the various circuits, refer to the vehicle wiring diagrams and diagnostic chart.

**Warning Chime System Diagram**

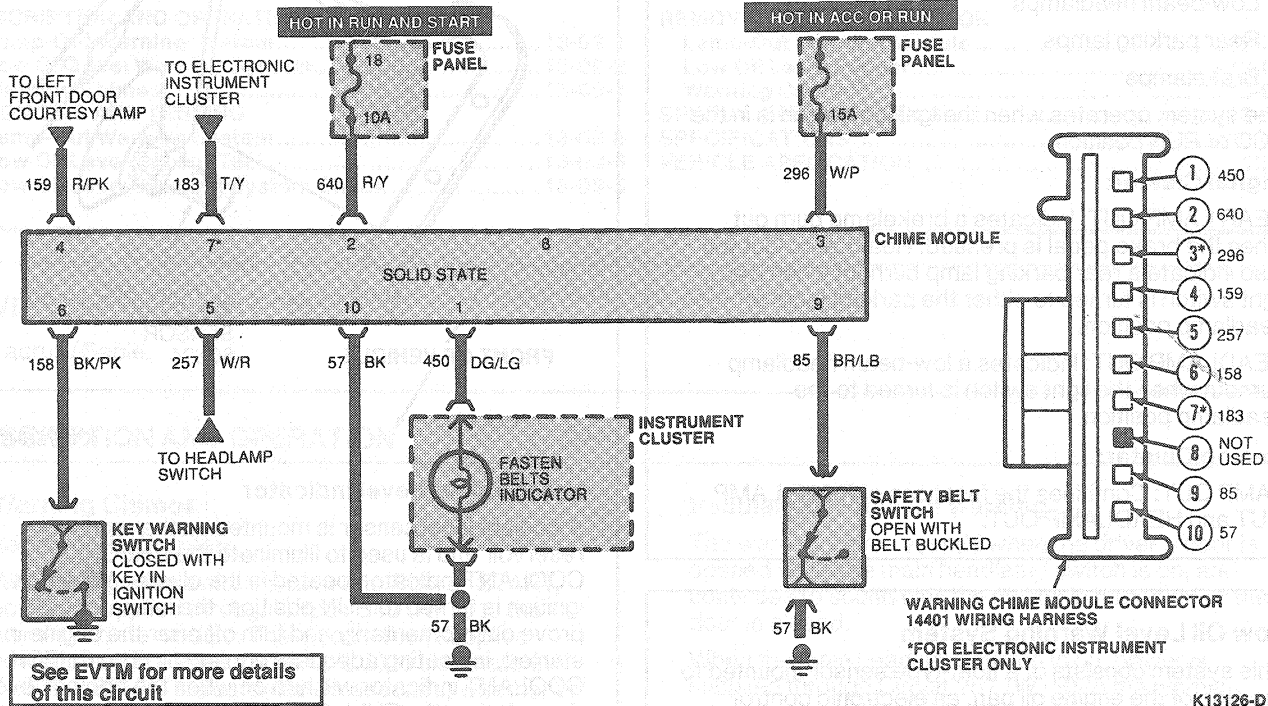

See EVTm for more details of this circuit

**NOTE:** The following step-by-step diagnosis must be performed to obtain reliable results. If a specific failure condition is known, refer to the Electrical and Vacuum Troubleshooting manual to quickly determine root cause and corrective action.

**ELECTRONIC WARNING CHIME DIAGNOSIS**

Terminal No.	Circuit	Wire Color	Function
1	450	DG/LG	Warning chime module to safety belt warning indicator
2	640	R/Y	Ignition (RUN or START) to warning chime module
3	296	W/P	Ignition (RUN or ACC) to warning chime module for electronic cluster only
4	159	R/PK	Dirver door courtesy switch to warning chime module
5	257	R/W	Headlamp switch to warning chime module
6	158	BK/PK	Key warning switch to warning chime module
7	183	T/Y	Tripminder to warning chime module for electronic cluster only
9	85	BR/LB	Safety belt switch to warning chime module
10	57	BK	Ground to warning chime module

TK17147B