

**REMOVAL AND INSTALLATION**


**Warning Chime**

**Removal and Installation**

The warning chime module is mounted on a bracket to the RH side of the steering column, on the instrument panel reinforcement.

1. Disconnect battery ground cable.

2. Depress tab on warning chime module and slide module off bracket.
3. Disconnect electrical connector to warning chime.
4. Remove chime.
5. To install, reverse Removal procedure.

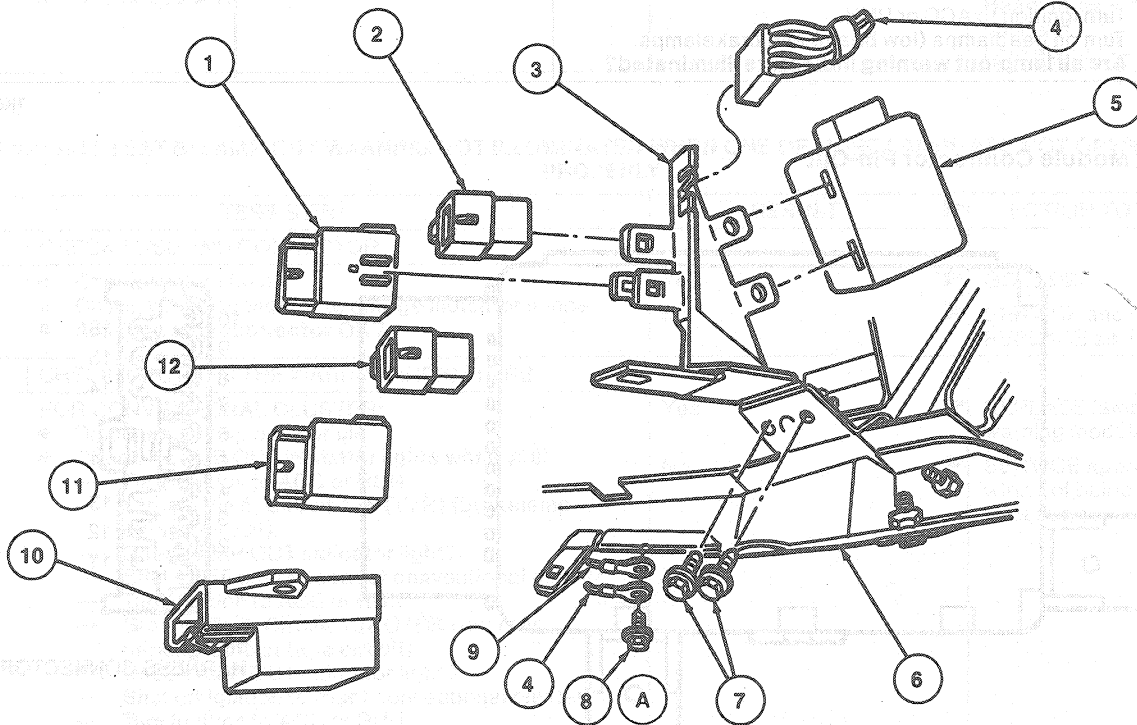

K16929-B

Item	Part Number	Description
1	6C625	Low Oil Indicator Assy
2	14B193	Horn Relay Assy
3	14A323	Relay Panel Bracket Assy
4	14401	Wiring Assy
5	17D539	Wiper Control Module
6	5404304	Instrument Panel Assy
7	N803876-S36	Screw (2 Req'd)

Item	Part Number	Description
8A	N805375-S36MG	Ground Screw
9	14401	Wiring Assy Ground (for Canadian Vehicles Only)
10	10D840	Chime Assy
11	18C641	Rear Window Defroster Timer (Sable)
12	14B193	Horn Relay Assy
A		Tighten to 12 N·m (9 Lb·Ft)

(Continued)

**Lamp-Out Warning Module**

**Except Taurus SHO**

**Removal and Installation**

1. Pull down fuse panel.

2. Remove two nuts retaining lamp outage module.
3. Disconnect electrical connector.