


REMOVAL AND INSTALLATION (Continued)

- 4. Install battery tray and battery. Refer to Section 14-01.

DISASSEMBLY AND ASSEMBLY

NOTE: All of the following Disassembly Steps may not be necessary to perform a particular test or service. Perform only those steps that apply. The following illustration is a disassembled view of the integral generator/regulator assembly.

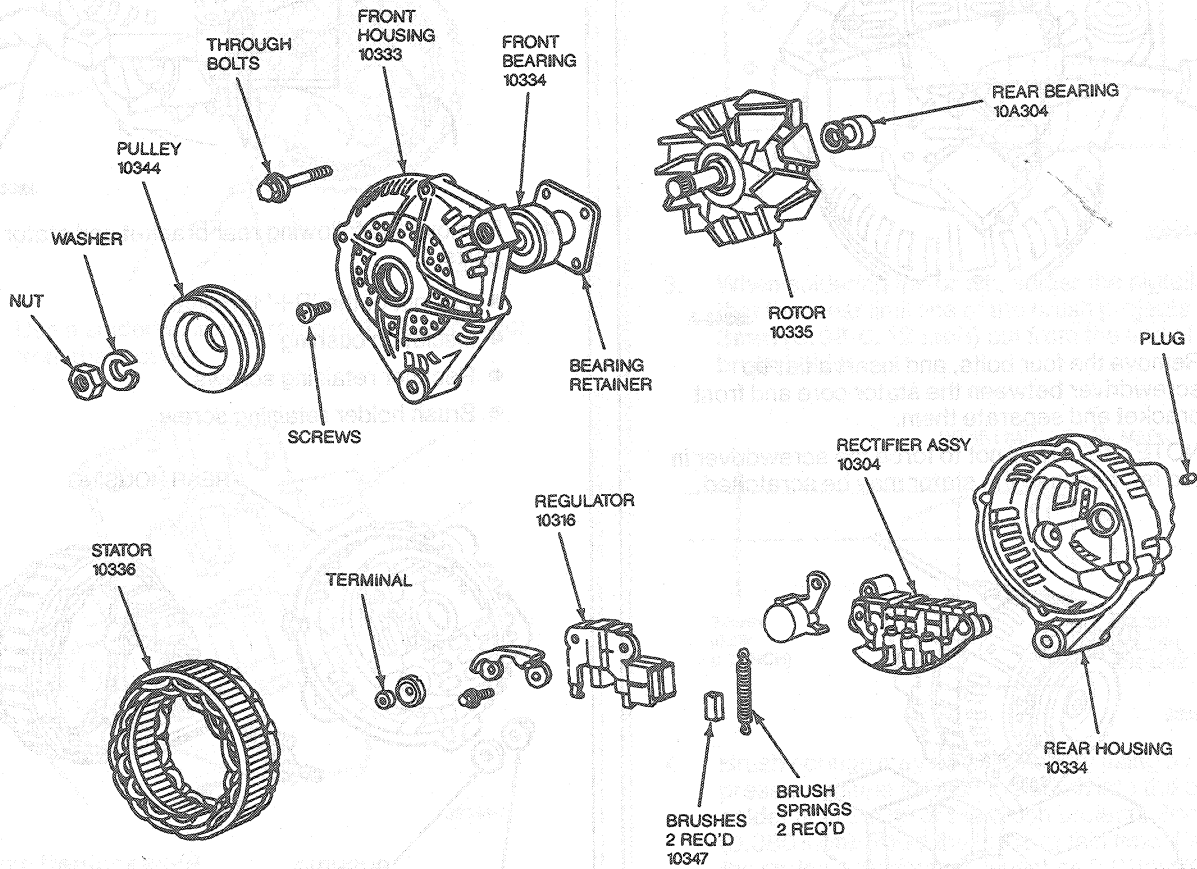

J3438-A