

DESCRIPTION AND OPERATION (Continued)

The following explains various features of controls:

- A. **POWER:** Push to turn ON, push again to turn OFF.
- B. **BAND INDICATOR:** Indicates if band is in AM, FM 1 or FM2 setting.
- C. **STATION INDICATOR:** Indicates radio station frequency in radio mode. When a tape is played, arrows indicate direction of tape removal.
- D. **TAPE OPENING:** When tape is inserted (with open edge to the right) and radio power is ON, tape begins to play.
- E. **REVERSE:** Push the left (<) side of REVERSE button to rewind a tape playing forward. To return tape play, push right (>) side of REVERSE button momentarily. Pushing both sides of REVERSE button simultaneously will reverse tape to opposite side (track).
- F. **REVERSE:** Push the right (>) side of REVERSE button to fast forward a tape playing forward. To return tape play, push left (<) side of REVERSE button momentarily. Pushing both sides of REVERSE button simultaneously will reverse tape to opposite side (track).
- G. **EJECT:** Press the EJECT button to stop the tape and eject cassette. The radio will resume playing if power is on.
- H. **AMS:** The automatic music search (AMS) button is used to change frequency up or down one increment at a time in radio mode. After pushing the AMS button, push and release either the right (>) or left (<) side of SEEK button. To change frequencies quickly, press and hold down either right or left side of SEEK button. In tape mode, use AMS button to change tape to next selection. First push and hold AMS button, then push either left or right side of REWIND button to find beginning of next tape selection.
- I. **SEEK:** Push right (>) side of SEEK button to tune radio to the next higher frequency station. Push left (<) side of SEEK button to tune radio down to next lower frequency station.
- J. **SCAN:** Press SCAN button to enter scan mode. The radio will begin to scan up to the next radio station for a five second sampling. To stop scan mode on presently sampled radio station, press the SCAN button a second time.
- K. **DOLBY:** Push No. 3 memory button to select Dolby® Noise Reduction in tape mode.
- L. **MEMORY BUTTONS:** The six memory buttons are used to store preferred broadcast stations in radio memory. To store a station, tune to desired station, push memory button in and hold for approximately two seconds until station sound returns, then release button. Repeat process for each memory button. Once a station is stored in memory, pushing a memory button for less than two seconds will cause radio to turn to stored station. All six memory buttons will store a station on AM, FM 1 or FM2 for a total of 18 storable radio stations.

- M. **AM/FM:** Each successive push, when in radio mode, will select AM, FM1 or FM2 as indicated by band indicator in display window.
- N. **VOLUME:** Push right (+) side of VOLUME button to increase volume, push left (-) side to decrease volume. If VOLUME button is held to the right or left, the volume will continuously increase or decrease (bars in display will show relative volume) until button is released.
NOTE: If the VOLUME button is set above a preset listening level when ignition switch is turned off, when ignition switch is turned back on, the volume will return to a nominal listening level. However, if radio power is turned off with the POWER button before ignition is turned off, volume will return to the position it was set at previously, when radio power is switched back on.
- O. **AUDIO:** The AUDIO button is used to adjust bass, treble, speaker balance and fade. Illuminated bars in display will show relative positions.
 - **Bass:** Push AUDIO button repeatedly until BASS is displayed. Push the right (+) side of VOLUME button to increase low frequency sound or left (-) side to decrease low frequency sounds.
 - **Treble:** Push AUDIO button repeatedly until TREB is displayed. Push the right (+) side of VOLUME button to increase high frequency sound or left (-) side to decrease high frequency sounds.
 - **Speaker Balance:** Push AUDIO button repeatedly until BAL is displayed. Push the right (+) side of VOLUME button to shift sound to right speakers or left (-) side to shift sound to left speakers.
 - **Speaker Fade:** Push AUDIO button repeatedly until FADE is displayed. Push the right (+) side of VOLUME button to shift sound to rear speakers or left (-) side to shift sound to front speakers.

