


DESCRIPTION AND OPERATION (Continued)

DESCRIPTION AND OPERATION (Continued)

Premium Analog Cassette Radio (PAC)

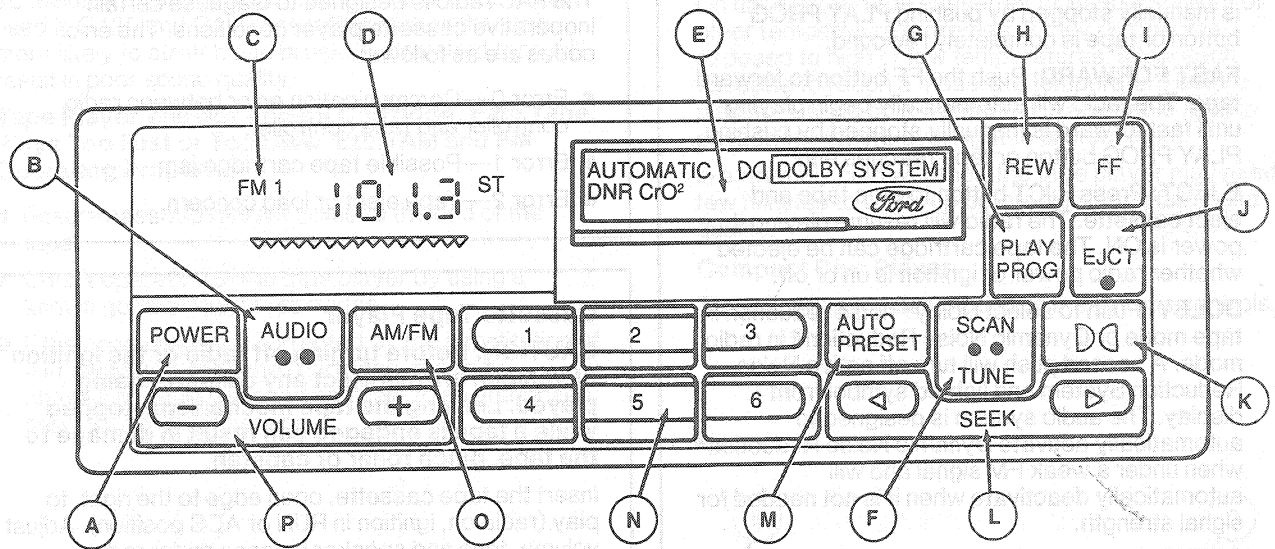

K16897-A

The features described are identical on all PAC radios.

- A. **POWER:** Push to turn radio ON, push again to turn OFF.
- B. **AUDIO:** The audio button is used to adjust bass, treble, speaker balance and fade. Illuminated bars in display will show relative positions.
- **BASS:** Push AUDIO button repeatedly until BASS is displayed. Push the right (+) side of VOLUME button to increase low frequency sounds or left (-) side to decrease low frequency sounds.
 - **TREBLE:** Push AUDIO button repeatedly until TREB is displayed. Push the right (+) side of VOLUME button to increase high-frequency sounds or left (-) side to decrease high-frequency sounds.
 - **SPEAKER BALANCE:** Push AUDIO button repeatedly until BAL is displayed. Push the right (+) side of VOLUME button to shift sound to right speakers or left (-) side to shift sound to left speakers.
 - **SPEAKER FADE:** Push AUDIO button repeatedly until FADE is displayed. Push the right (+) side of VOLUME button to shift sound to rear speakers or left (-) side to shift sound to front speakers.
- C. **BAND INDICATOR:** Indicates if band is in AM, FM1 or FM2 setting.
- D. **STATION INDICATOR:** Indicates radio station frequency in radio mode. When tape is played, whirling sprockets indicate direction of tape travel.

- E. **TAPE OPENING:** Cassette tape player is equipped with power loading. When tape is inserted (with open edge to the right) the loading mechanism draws the tape in the rest of the way and begins to play.
- F. **SCAN TUNE:** Press SCAN TUNE button to enter scan mode (display will blink SCN). Pushing the right (>) side of SEEK button will begin forward scan mode up to the next radio station for a five second sampling, or a five second sampling of the next tape selection on tape currently playing. Pushing left (<) side of SEEK button will begin reverse scan mode to previous radio station for a five second sampling or a five second sampling of previous tape selection on tape currently playing. To stop scan mode on presently sampled radio station, press the side of SEEK button which matches the direction the radio is currently scanning or re-press SCAN TUNE button. To stop scan mode on presently sampled tape selection, press the side of SEEK button which matches the direction tape is currently scanning. To change radio stations up or down by one increment, push SCAN TUNE button twice (display reads TUNE), then within five seconds press and release either right (>) or left (<) side of SEEK button. To change stations quickly, press and hold either the right or left side of SEEK button.
- G. **PLAY PROGRAM:** Push and hold PLAY PROG button for 1 second to stop the tape player and resume radio play. The cassette will be stored in the tape player and the symbol will display until PLAY PROG button is pushed to resume tape play.