


REMOVAL AND INSTALLATION (Continued)

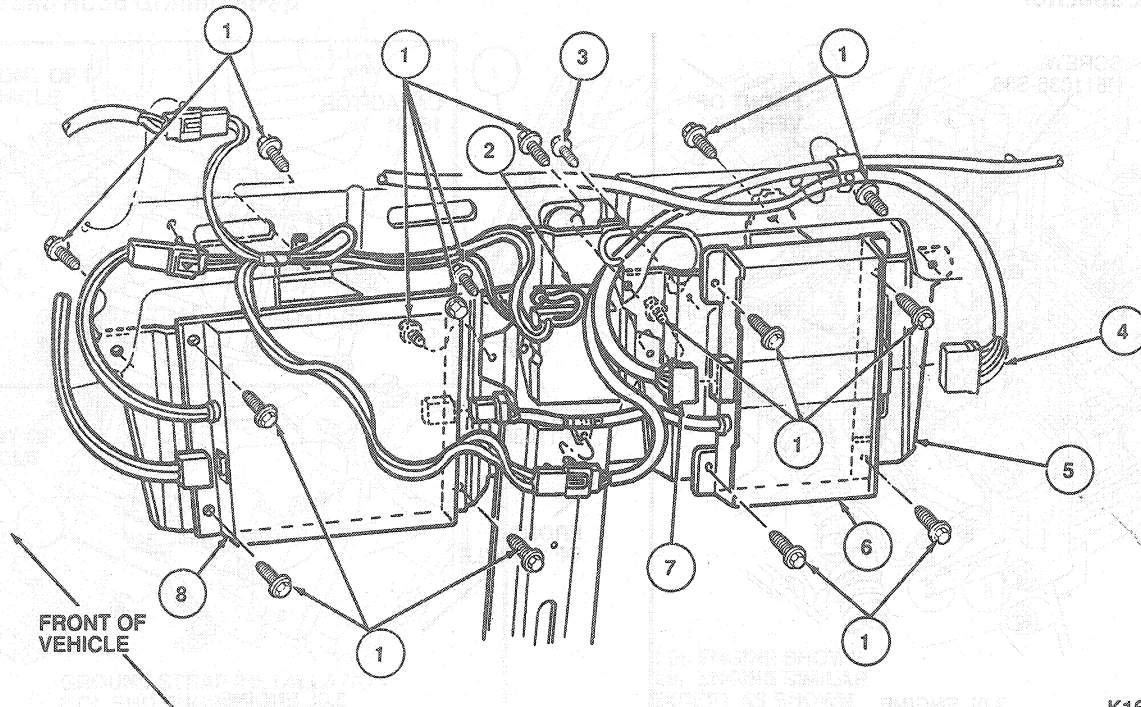

K16900-B

Item	Part Number	Description
1	56910-S36	Screw
2	19A087	Choke and Cap Assy
3	N801846-S36MG	Screw

(Continued)

Item	Part Number	Description
4	19B113	Wiring Assy
5	19B180	Bracket Assy
6	18C807	Amplifier Assy
7	18C808	Subwoofer Amplifier Assy

CLEANING

Cassette Tape Player

Head

The playback head, capstans and pinch rollers may accumulate an oxide residue as the tape passes through the components while playing. Depending on the quality used, more or less oxide will accumulate. Oxide accumulation can cause weak or wavering sound and damage to the cassette tape and/or player.

It is recommended for best performance that the tape player be cleaned after every 10 to 12 hours of playing time with a Ford Cassette Cleaning Cartridge or equivalent.


CAUTION: The use of other cassette cleaners is not recommended. Damage to the cassette player could result.

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	N·m	Lb·in
Amplified Assy Screw	3.4-4.8	30.1-42.5
Ground Strap Bolt and Ground Strap Nut	46.7-63.3	34.4-46.7 (Lb-Ft)

SPECIAL SERVICE TOOLS

Tool Number / Description	Illustration
T87P-19061-A Radio Removing Tool	 T87P-19061-A