


REMOVAL AND INSTALLATION (Continued)

2. Disconnect antenna lead from RH rear of radio receiver and remove cable from heater or A/C cable retaining clips.

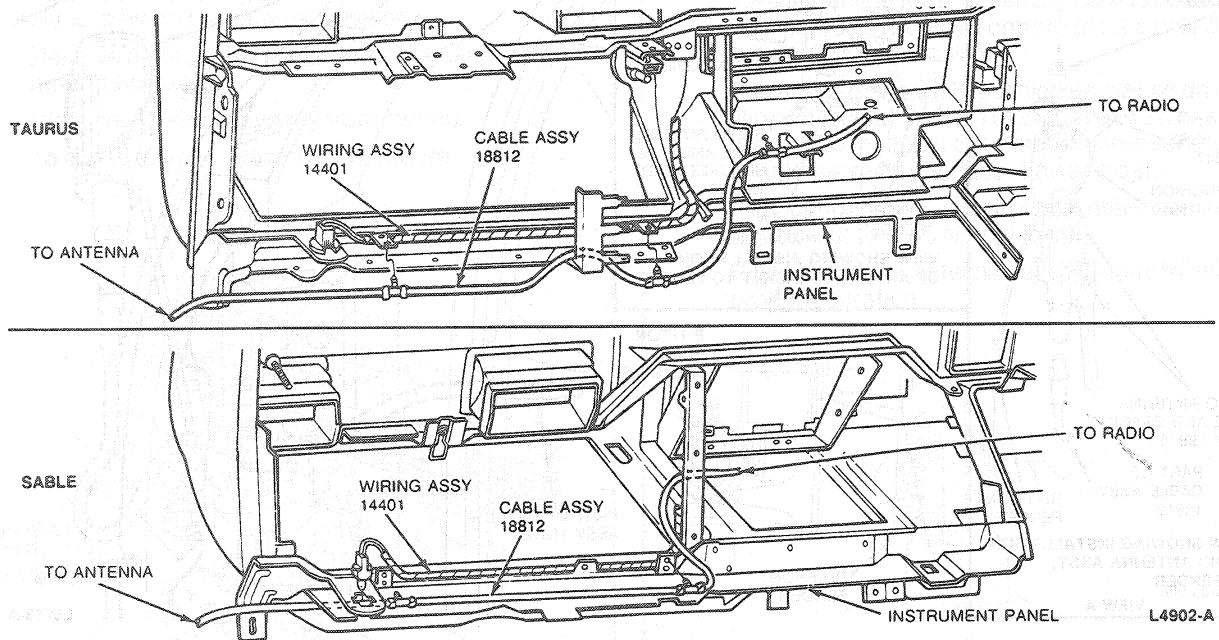

3. Remove RH front fender liner. Unplug coaxial cable from power antenna assembly or manual antenna base assembly. Unplug power lead from power antenna.
- NOTE: The manual antenna mast is detachable from the base and cable assembly.
4. Under RH front fender, pull antenna cable through hole in door hinge pillar and remove antenna cable assembly from wheel well area.

5. To remove manual or power antenna base, remove antenna nut and stanchion on RH front fender.
6. Remove lower antenna base screw and remove either manual antenna base or power antenna.
7. To install, reverse Removal procedure.