


REMOVAL AND INSTALLATION (Continued)

Automatic Power Antenna Module



Removal and Installation

1. Push in on sides of glove compartment door and place in hinged downward position.
2. Remove antenna module from air bag diagnostic module bracket.
3. Disconnect wire assembly from module.
4. To install, reverse Removal procedure.

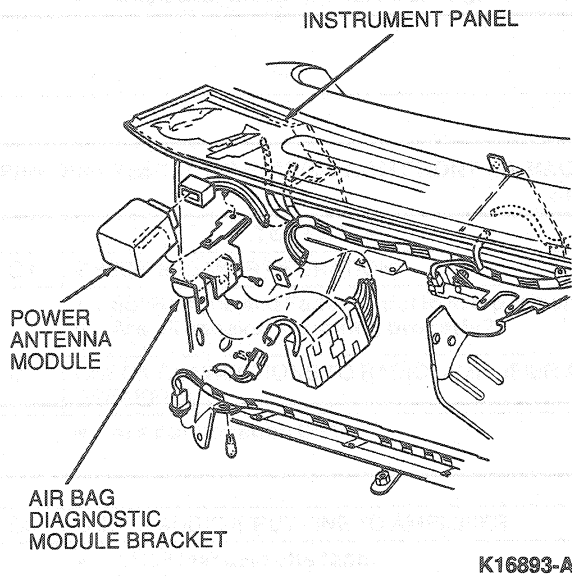

Installation

1. With the teeth on plastic drive wire facing toward motor on antenna, push end of plastic drive wire of replacement mast assembly down into tube. Push it around curve at bottom of tube until end enters drive mechanism.
2. Run motor down while pushing on plastic drive wire until about 305mm (12 inch) of wire has been drawn into the tube. Stop motor and insert bottom of antenna mast into tube. Lower mast.
3. Slide contact tube and nut down antenna mast. Tighten nut to 0.45 N-m (4 lb-in).
4. Raise and lower antenna several times to ensure proper operation.

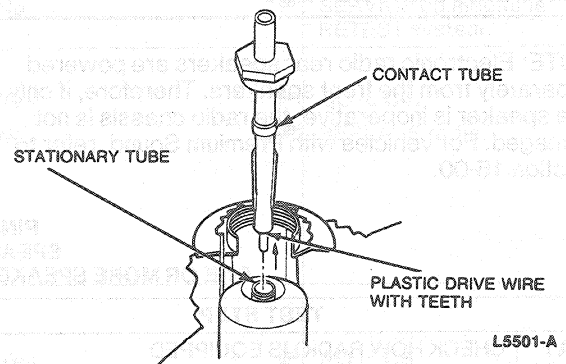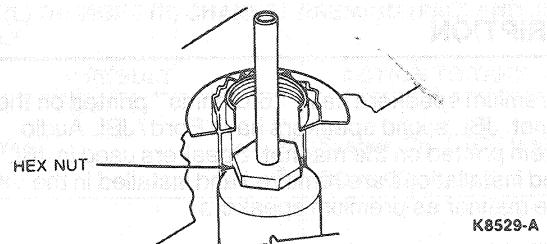

Mast, Power

NOTE: A power antenna mast which is bent or broken can be replaced without replacing the motor and tube assembly.

Removal

1. Remove antenna nut and stanchion.
2. Slide 14mm (9/16 inch) socket over mast.
3. Loosen retaining nut inside tube and slide it part-way up mast.
4. Raise antenna to run plastic drive wire at bottom of mast out of motor. Note direction of teeth on plastic drive wire.
5. Saw off damaged portion of antenna mast. Remove burrs from mast and slide nut and contact tube off stationary tube.

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	N-m	Lb-In
Contact Tube and Nut	0.45	4