

DESCRIPTION AND OPERATION (Continued)

STEP	DESCRIPTION	STD. DEFAULT (First Phone Number)	STD. DEFAULT (Second Phone Number)
09	Initial paging channel (usually 0333 for 'A' system or 0334 for 'B' system)	OXXX	OXXX
10	OPTION PROGRAMMING	1XX100 (1XX110, if a second phone number is desired)	XXX000
10	For FORD telephones set to: 1XX100 (replace the X's by 1 or 0 depending on the requirements from the local service provider/carrier)		
	Internal speaker disable bit (set to 1 for FORD)	1	1
	Local Use 1 = enable	X	X
	Local Use 0 = disable		
	MIN MARK 1 = enable	X	X
	MIN MARK 0 = disable		
	Auto recall (always one) last 2 least significant digits set 0 for FORD	1 0	0 0
11	OPTION PROGRAMMING Ford FORD telephones set to 1100	0 XXXX	0 XXXX

TK19316A

8. After all information has been entered, press * to go through all the entries to verify that the information entered is correct. To store the information, press * so that the display shows any entry number (i.e. 01, 02, etc.), then press SEND. The transceiver should power down and power-up to indicate that the programming is done.
9. Verify that the information was stored by pressing RCL + #. The just programmed phone number should be displayed.
 - Any subsequent programming attempts will require that you enter FCN + 6 digit security code twice + RCL in order to enter the programming mode (Step 1).
 - You can program the telephone three times. After that, you will not be able to enter the programming mode using the security code.

10. If the telephone cannot make calls within a few hours, verify that the local service provider / carrier has the correct Electronic Serial Number (ESN) for the user's telephone. The ESN should be available from the selling dealer.

Dual Phone Numbers

Your cellular telephone is equipped with a feature that allows you to maintain two different telephone numbers. Both numbers can be from separate carriers, and are accessed separately in your telephone. Your phone must be programmed by your dealer with both phone numbers. To arrange for dual phone numbers, contact your Lincoln dealer or call the Ford Cellular System at 1-800-367-3013.

Your phone can only be active in one phone number at a time. Calls will be placed and received on the active phone number only. To determine which phone number is active press RCL + # to display the number.

To operate with the phone number in the display press END. To switch your telephone to the other phone number press RCL + # + RCL. The original telephone number will disappear from the display and the new number will appear.

DIAGNOSIS AND TESTING

If there is a concern making calls on the cellular telephone, check the following information first:

1. Make sure the telephone is turned ON. With the power button on, the system should be on while the ignition is on.
2. Make sure the customer is calling within the service area. NO SVC will appear in the display if the customer is calling from outside the service area.
3. Check to see if the ROAM indicator is ON. If so, follow the roaming instructions in the operating guide.
4. Make sure the display does not read LOC'D. If it does, the phone must be unlocked using the customer's three-digit code.
5. Make sure the handset is securely cradled.
6. Check the antenna and power cable connections at the transceiver, located in the luggage compartment. Also check the fuse located on the wiring harness in the luggage compartment, near the 4-way connector.
7. Check the handset modular connector.
8. Check the telephone system registration. Also check to make sure that the telephone is properly programmed. Incorrect programming can result in single system scanning, loss of speed dialing, loss of hands-free audio, loss of auto redial, loss of DTMF tones, and the loss of other keypad/handset functions.