

LIGHTING

GROUP

17

(13000)

SECTION TITLE	PAGE	SECTION TITLE	PAGE
LIGHTING, EXTERIOR	17-01-1	LIGHTING, INTERIOR	17-02-1

SECTION 17-01 Lighting, Exterior

SUBJECT	PAGE	SUBJECT	PAGE
ADJUSTMENTS		REMOVAL AND INSTALLATION (Cont'd.)	
Headlamp Aim	17-01-30	Headlamp Dimmer Switch	17-01-28
Photocell/Amplifier	17-01-30	Headlamp Switch	17-01-28
CLEANING	17-01-30	High-Mount Stoplamp	17-01-25
DESCRIPTION AND OPERATION		Lamp and Bulb Assembly Replacement,	
Daytime Running Lamps	17-01-2	Rear	17-01-22
Fog Lamp and Switch	17-01-4	Lamp Assembly Replacement, Backup	17-01-26
Headlamp and Dimmer Switch	17-01-2	Lamp Replacement, License Plate	17-01-24
Headlamp Delay System — Autolamp	17-01-3	Lamp, Parking/Turn Signal	17-01-19
Headlamps ON Warning Chime	17-01-2	Lamps, Parking/Turn Signal	
Headlamps, Aerodynamic	17-01-1	Combination	17-01-19
DIAGNOSIS AND TESTING		Module and Bracket Assembly, DRL	17-01-30
Headlamp Delay System	17-01-8	Photocell/Amplifier Assembly	17-01-28
Headlamp Switch Connector Checkout	17-01-5	Potentiometer	17-01-28
REMOVAL AND INSTALLATION		Rheostat and Dimmer Switch — Instrument	
Bulb Replacement, Backup	17-01-24	Panel Illumination and Interior Lamps	17-01-28
Cornering Lamp	17-01-21	Side Marker Lamp Replacement, Rear	17-01-24
Fog Lamp Assembly	17-01-19	Side Marker Lamp, Front	17-01-20
Fog Lamp Switch	17-01-29	Stoptamp Switch, Mechanical	17-01-26
Headlamp Assembly	17-01-15	SPECIAL SERVICE TOOLS	17-01-30
Headlamp Assembly, Auxiliary	17-01-20	SPECIFICATIONS	17-01-30
Headlamp Control Relay	17-01-29	VEHICLE APPLICATION	17-01-1

VEHICLE APPLICATION

Taurus / Sable and Taurus SHO.

DESCRIPTION AND OPERATION

Headlamps, Aerodynamic

The aerodynamically styled headlamp system uses replaceable halogen bulbs. A burned out bulb may be replaced without removing the headlamp body.

CAUTION: Do not interchange halogen headlamp bulbs with conventional bulbs.