

**DIAGNOSIS AND TESTING (Continued)**

REMOVAL AND INSTALLATION (Continued)

<b>ELECTRICAL — LAMPS (Continued)</b>		
<b>CONDITION</b>	<b>POSSIBLE SOURCE</b>	<b>ACTION</b>
<ul style="list-style-type: none"> <li>● Stoplamps Do Not Light</li> </ul>	<ul style="list-style-type: none"> <li>● Fuse burned out.</li> <li>● Problem in turn signal circuit or switch.</li> <li>● Loose connections.</li> <li>● Stoplamp switch inoperative.</li> <li>● Open wiring.</li> </ul>	<ul style="list-style-type: none"> <li>● Replace fuse or CB. If device blows again, check for short circuit.</li> <li>● Service turn signal circuit or replace turn signal.</li> <li>● Secure connections at stoplamp switch.</li> <li>● Replace stoplamp switch.</li> <li>● Service as required.</li> </ul>
<ul style="list-style-type: none"> <li>● Hi-Mount Stoplamp Out</li> </ul>	<ul style="list-style-type: none"> <li>● Bulb burned out.</li> <li>● Open wiring or poor ground.</li> <li>● Corroded bulb socket.</li> </ul>	<ul style="list-style-type: none"> <li>● Replace bulb.</li> <li>● Service as necessary.</li> <li>● Service or replace socket.</li> </ul>
<b>Turn Signal Lamps</b>		
<ul style="list-style-type: none"> <li>● One or More Lamps Inoperative</li> </ul>	<ul style="list-style-type: none"> <li>● Bulb burned out.</li> <li>● Loose connections.</li> <li>● Open wiring.</li> <li>● Turn signal switch inoperative.</li> </ul>	<ul style="list-style-type: none"> <li>● Replace bulb.</li> <li>● Secure connections.</li> <li>● Service as required.</li> <li>● Replace turn signal switch.</li> </ul>
<ul style="list-style-type: none"> <li>● All Lamps Inoperative</li> </ul>	<ul style="list-style-type: none"> <li>● Fuse burned out.</li> <li>● Turn signal flasher inoperative.</li> <li>● Loose connections.</li> <li>● Open wiring.</li> <li>● Turn signal switch inoperative.</li> </ul>	<ul style="list-style-type: none"> <li>● Replace fuse or CB. If device blows again, check for short circuit.</li> <li>● Replace flasher.</li> <li>● Tighten connections.</li> <li>● Service as required.</li> <li>● Replace turn signal switch.</li> </ul>
<b>Hazard Flasher Lamps</b>		
<ul style="list-style-type: none"> <li>● Lamps Do Not Flash</li> </ul>	<ul style="list-style-type: none"> <li>● Turn signal operation improper.</li> <li>● Fuse burned out.</li> <li>● Hazard flasher inoperative.</li> <li>● Open wiring.</li> <li>● Hazard flasher switch inoperative.</li> </ul>	<ul style="list-style-type: none"> <li>● Service turn signal system.</li> <li>● Replace fuse. If fuse blows again, check for a short circuit.</li> <li>● Replace flasher.</li> <li>● Service as required.</li> <li>● Service or replace the turn signal switch assembly, which includes the hazard flasher switch.</li> </ul>

TK18605A

**REMOVAL AND INSTALLATION**

**Headlamp Assembly**

**WARNING: THE REPLACEABLE HALOGEN HEADLAMP BULB CONTAINS GAS UNDER PRESSURE. THE BULB MAY SHATTER IF THE GLASS ENVELOPE IS SCRATCHED OR THE BULB IS DROPPED. HANDLE BULB CAREFULLY. GRASP BULB ONLY BY ITS PLASTIC BASE. AVOID TOUCHING GLASS ENVELOPE. KEEP BULB OUT OF REACH OF CHILDREN.**

**Removal and Installation**

NOTE: The headlamp on this vehicle does not need replacement when the bulb burns out. Refer to Bulb Replacement, in this Section, for removal and installation of headlamp bulb.

1. Position headlamp switch in the OFF position.
2. Remove electrical connector from headlamp bulb by grasping wires firmly and snapping connector rearward.
3. Remove park / turn lamp bulb and connector.  
NOTE: Use snap ring pliers to spread the retainer.
4. Remove three retainers attaching headlamp to grille opening panel.
5. To install, reverse Removal procedure.
6. Aim headlamp as outlined.