

REMOVAL AND INSTALLATION (Continued)

Side Marker Lamp, Front

Taurus

Removal and Installation

1. Remove two nuts and washers from retaining studs at back of lamp assembly.

2. Pull lamp outboard until clear of grille opening reinforcement.
3. Remove bulb socket by twisting counterclockwise and remove bulb by pulling.
4. To install, reverse Removal procedure.


Headlamp Assembly, Auxiliary

Taurus SHO

NOTE: There is no bulb replacement possible in this assembly.

Removal and Installation

1. Remove headlamp assembly as outlined.
2. Remove two screws attaching auxiliary headlamp to headlamp assembly.
3. To install, reverse Removal procedure.

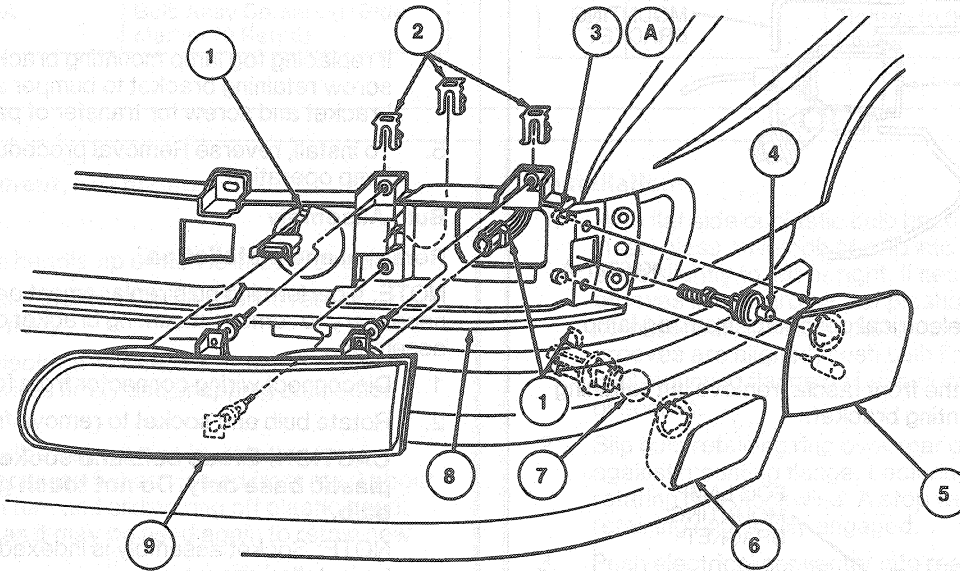

K16709-A

Item	Part Number	Description
1	14290	Wiring Assy
2	13N020	Headlamp Retainer (6 Req'd)
3A	N621906-S54	Nut (4 Req'd)
4	13465	Side Marker Bulb Assy (2 Req'd)
5	15A424 (RH) 15A425 (LH)	Front Side Marker Lamp Assy

(Continued)

Item	Part Number	Description
6	—	Cornering Lamp, Part of Bumper Assy
7	13465	Cornering Lamp Bulb Assy (2 Req'd)
8	—	Grille Opening Panel
9	13005 (RH) 13006 (LH)	Headlamp Assy
A		Tighten to 5.2-7.2 N-m (47-63 Lb-In)