



REMOVAL AND INSTALLATION (Continued)

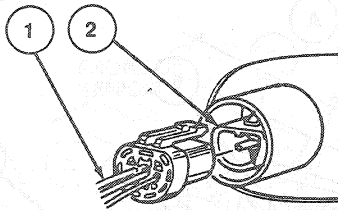

VIEW SHOWING INSTALLATION OF WIRING ASSY TO HEADLAMP ASSY

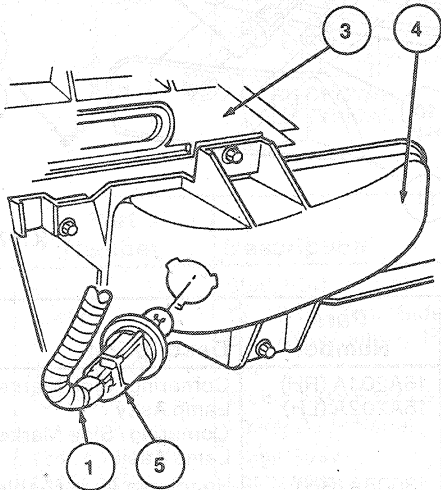

RH CORNERING LAMP SHOWN
LH TYPICAL K12990-D

Item	Part Number	Description
1	14290	Wiring Assy
2	13005 (RH) 13006 (LH)	Headlamp Assy

(Continued)

REMOVAL AND INSTALLATION (Continued)

Item	Part Number	Description
3	—	Bumper Assy
4	—	Cornering Lamp Assy
5	—	Cornering Lamp Socket Assy

Cornering Lamp

Taurus Except SHO

Removal

1. Remove three screws retaining cornering lamp to bumper.
2. Remove bulb and socket assembly by twisting counterclockwise.

Installation

1. Install bulb, if removed and install socket assembly into cornering lamp by twisting clockwise.
2. Position cornering lamp assembly and install three retaining screws.

Sable and Taurus SHO

Removal

1. Remove two nuts and screw retaining cornering lamp assembly, and lift out.
2. Remove bulb and socket assembly by twisting counterclockwise.

Installation

1. Install bulb, if removed, and install socket into lamp assembly by twisting clockwise.
2. Position cornering lamp in place, and install two nuts and screw.