

REMOVAL AND INSTALLATION (Continued)

Item	Part Number	Description
1	13404-A (RH) 13405-A (LH)	Rear Lamp Assy
2	13465-A	Bulb (2 Req'd Each Lamp Assy)
3	14405	Wiring Assy
4	N800335-S36M	Nut (2 Req'd Each Lamp Assy)
5	15A456-A (RH) 15A457-A (LH)	Side Marker Lamp Assy
6	13465-B	Bulb
7	N800503-S	Nut (2 Req'd Each Lamp Assy)
8	382886-S49	Screw (2 Req'd Each Lamp Assy)

Side Marker Lamp Replacement, Rear

Sedan

NOTE: Taurus and Sable side marker lamp assembly is an integral part of the rear lamp assembly.

Wagon

Refer to illustration under Lamp Assembly Replacement, Rear—Wagon.

Removal

1. Remove two nuts retaining lamp assembly to quarter panel.
2. Remove lamp assembly.

Installation

1. Position lamp assembly to quarter panel.
2. Install two nuts retaining lamp assembly to quarter panel.


Lamp Replacement, License Plate

Removal and Installation


NOTE: Two license plate lamp bulbs are located under rear lip of luggage compartment doors.

To replace license plate lamp assembly or bulb, remove two lamp body plastic retaining rivets. Remove the lamp assembly. Remove socket and bulb from back of lamp body to replace bulb.

Sedan

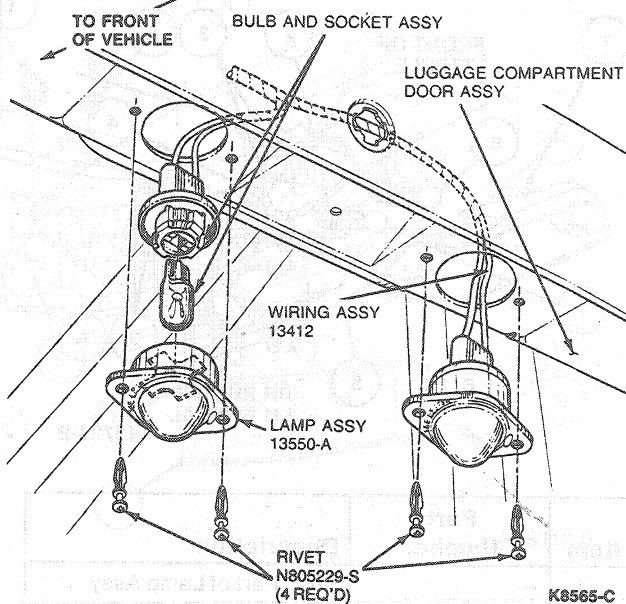

Wagon

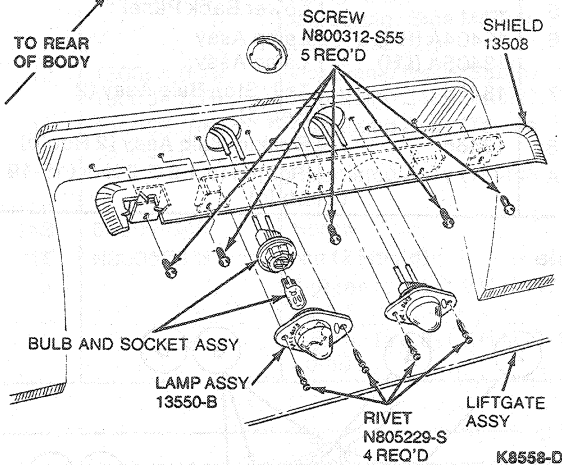

Bulb Replacement, Backup

Removal and Installation

NOTE: Backup lamps are part of rear lamp assembly. To replace a bulb, perform the Rear Lamp Assembly Replacement procedure.

NOTE: Backup lamps are part of rear lamp assembly.