

SECTION 17-02 Lighting, Interior

SUBJECT	PAGE	SUBJECT	PAGE
DESCRIPTION AND OPERATION		REMOVAL AND INSTALLATION (Cont'd.)	
Illuminated Entry	17-02-2	Lamp Switch, Glove Compartment	17-02-10
Lamp, Dome/Map Combination	17-02-1	Lamp, Cargo	17-02-11
DIAGNOSIS AND TESTING		Lamp, Dome/Map Combination	17-02-7
Check-Out Procedure	17-02-4	Lamp, Front Door	17-02-11
Quick Checks	17-02-4	Lamp, Transmission Control Selector	17-02-10
REMOVAL AND INSTALLATION		SPECIFICATIONS	17-02-11
Illuminated Entry	17-02-9	VEHICLE APPLICATION	17-02-1
Lamp Switch, Courtesy/Dome	17-02-10		

VEHICLE APPLICATION

Taurus/Sable.

DESCRIPTION AND OPERATION

Lamp, Dome/Map Combination Without Moon Roof

The two map lamps are located on each side of the dome/map lamp housing. The map lamps are operated independently of the dome lamp by two switches located on lamp housing. The dome lamp is illuminated by turning the thumbwheel rheostat to the detented UP position. The dome lamp also illuminates when the doors are opened (switch in the pillar).

With Moon Roof

The roof console contains two lamps which function as door courtesy lamps when the doors are open. These lamps also function as map lamps when the doors are closed and the lamp switch is activated.

