


REMOVAL AND INSTALLATION (Continued)

3. To install, reverse Removal procedure. Check and adjust door margin and fit as needed.

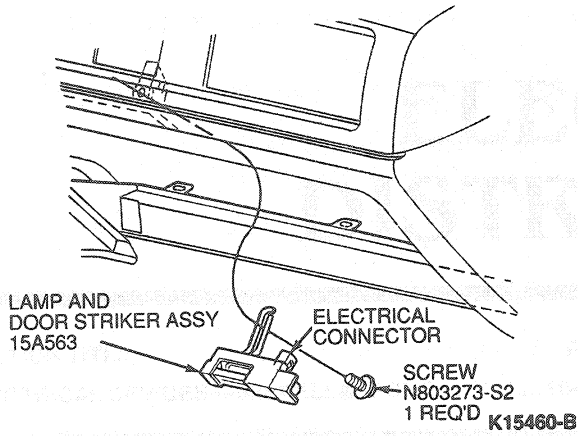

2. Remove and install bulb.
3. To install, position rear edge of lens under reflector and snap into position.

**Lamp, Cargo
Bulb Replacement
Wagon**

Removal

1. Use thin, flat-bladed screwdriver in notch between lens and lamp body to disengage lens from lamp body.
2. Remove and install bulb.

Installation

Position lens into three slots in lamp body and push in until it snaps in place.

**Lamp, Front Door
Bulb Replacement**

Removal and Installation

1. Use thin, flat-bladed screwdriver in notch at front edge of lens to remove lens.

SPECIFICATIONS

TORQUE SPECIFICATIONS

Description	N-m	Lb-Ft
Courtesy Lamp Switch	14-19	11-14