

ELECTRICAL DISTRIBUTION

GROUP 18

(1000)

SECTION TITLE	PAGE	SECTION TITLE	PAGE
ELECTRICAL DEVICES—MISCELLANEOUS.....	18-04-1	WIRING AND CIRCUIT PROTECTION	18-01-1

SECTION 18-01 Wiring and Circuit Protection

SUBJECT	PAGE	SUBJECT	PAGE
DESCRIPTION AND OPERATION		REMOVAL AND INSTALLATION (Cont'd.)	
Fuse Links.....	18-01-4	Fuses and Circuit Breakers.....	18-01-4
Fuses and Circuit Breakers.....	18-01-2	Instrument Panel, Main.....	18-01-23
DIAGNOSIS AND TESTING		Lower Back Panel—Sedan.....	18-01-35
Fuse Link Continuity Test.....	18-01-4	Power Distribution Box.....	18-01-6
REMOVAL AND INSTALLATION		Radiator Support Wiring.....	18-01-10
Alternator Connectors.....	18-01-8	Rear Quarter Back Panel.....	18-01-37
Engine Wiring.....	18-01-17	SPECIAL SERVICE TOOLS	18-01-37
Fender Apron, LH.....	18-01-15	SPECIFICATIONS	18-01-37
Fuse Link.....	18-01-4	VEHICLE APPLICATION	18-01-1
Fuse Panel.....	18-01-4		

VEHICLE APPLICATION

Taurus / Sable.

Part Number	Description	Part Number	Description
18-01-23	Instrument Panel	18-01-23	Instrument Panel
18-01-35	Lower Back Panel—Sedan	18-01-35	Lower Back Panel—Sedan
18-01-6	Power Distribution Box	18-01-6	Power Distribution Box
18-01-10	Radiator Support Wiring	18-01-10	Radiator Support Wiring
18-01-37	Rear Quarter Back Panel	18-01-37	Rear Quarter Back Panel
18-01-37	SPECIAL SERVICE TOOLS	18-01-37	SPECIAL SERVICE TOOLS
18-01-37	SPECIFICATIONS	18-01-37	SPECIFICATIONS
18-01-1	VEHICLE APPLICATION	18-01-1	VEHICLE APPLICATION