


REMOVAL AND INSTALLATION (Continued)

(Continued) REMOVAL AND INSTALLATION

In-Line Connectors

Component Connectors

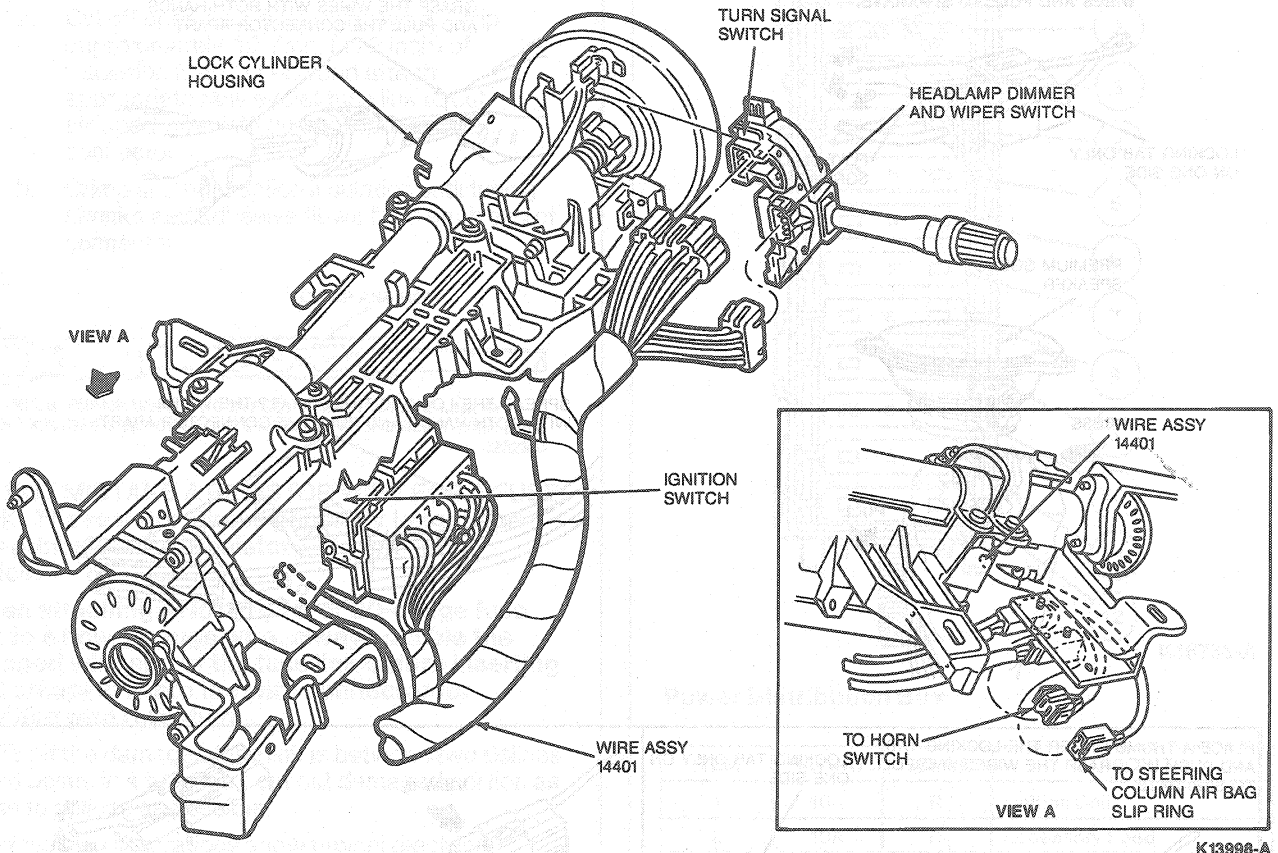

Alternator Connectors

3.0L and 3.8L Engines, 130 Amp Alternator

