

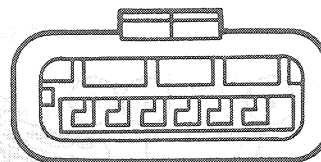
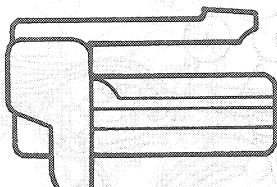


REMOVAL AND INSTALLATION (Continued)

Distributor Ignition (DI) Module 12A297 Connector

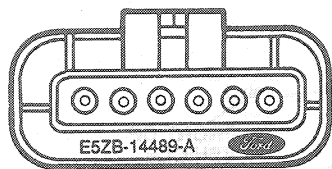

CONNECTOR  
14489

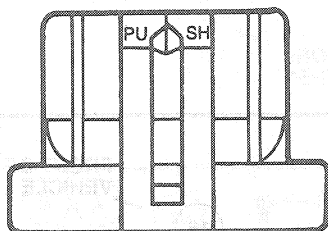


DI CONNECTOR DISENGAGEMENT PROCEDURE

1. GRASP CONNECTOR PLACING THUMB ON TAB MARKED "PUSH".
2. WHILE HOLDING CONNECTOR BODY, USE THUMB PRESSURE TO DEPRESS LOCKING TAB AND PULL CONNECTOR FROM MODULE. (NOTE: "WIGGLING" THE CONNECTOR WILL MAKE SEPARATION EASIER).

K13109-B

3.0L Engine Module Connector Shown  
3.8L Engine Similar

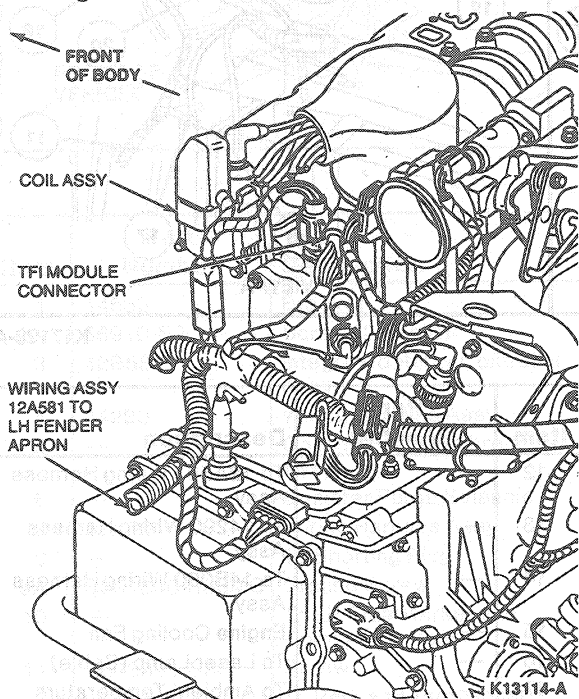

The illustrations show the complete wiring harness installation for Taurus / Sable vehicles. Refer to the illustrations for the harness being replaced while performing the following Removal and Installation procedures.

Removal

1. Disconnect battery ground cable.  
NOTE: Refer to Section 01-05 if it is necessary to remove any trim panels to gain access to the harness.
2. Disconnect all wiring harness connectors.
3. Disengage harness from all locators, straps and / or clips as necessary, including ground wire eyelets. Remove harness from vehicle.

Installation

1. Position harness in vehicle. Ensure that harness is engaged in all locators, straps and / or clips.
2. Connect all harness connectors to components or other harnesses as necessary.
3. Secure ground eyelets to body as necessary.
4. Connect battery ground cable. Check all applicable circuits for proper operation.
5. Install any trim removed during harness removal. Refer to Section 01-05.