

REMOVAL AND INSTALLATION (Continued)

(Continued)

Item	Part Number	Description
1	10B886	Wiring Harness Assy
2	12A648	Engine Coolant Temperature Sensor
3	12029	Ignition Coil Assy
4	9D930	Fuel Charging Wiring
5	—	To Distributor Ignition
6	12A581	Wiring Harness Assy Flex Fuel With VPS
7	12A581	Wiring Harness Assy
8	—	To Rear Heated Oxygen Sensor
9	—	To Electronic Ignition Module
10	—	To Vapor Management Valve
11	9E731	Vehicle Speed Sensor
12	—	To Variable Assist Power Steering Motor

Item	Part Number	Description
13	—	To Power Steering Pressure Switch
14	—	To Oil Pressure Switch
15	—	To Engine Coolant Temperature Switch
16	—	To Turbine Speed Sensor
17	—	To Neutral Start Switch
18	—	To AXOD Sensor
19	14290	Wiring Harness Assy
20	3F720	Wiring Harness Assy (For Vehicles With VAPS)
21	14536	Bracket
22	N605798-S36	Bolt
23	—	Mass Air Flow Sensor
24	12697	Intake Air Temperature Sensor
25	—	Oil Level Sensor

(Continued)

