

REMOVAL AND INSTALLATION (Continued)

(Continued)

Item	Part Number	Description
1	12029	Ignition Coil
2	9B989	Throttle Position Sensor
3	12A648	Engine Coolant Temperature Sensor
4	9F715	Idle Air Control Valve
5	12A581	Wiring Harness Assy
6	—	To Power Steering Pressure Switch
7	9278	Oil Pressure Sender
8	—	To Vehicle Speed Sensor

Item	Part Number	Description
9	14401	Wiring Harness Assy
10	15520	Backup Lamp Switch
11	14A099	Shield
12	18832	Radio Noise Capacitor
13	9D930	Fuel Charging Wiring
14	9J460	Pressure Feedback EGR (PFE) Sensor
15	6C624	Low Oil Sensor
16	—	To Heated Oxygen Sensor
17	14290	Wiring Harness Assy
18	—	To A/C Compressor Clutch

(Continued)

