

REMOVAL AND INSTALLATION (Continued)

Item	Part Number	Description
1	9J459	PFE Vacuum Regulator
2	12A648	Engine Coolant Sensor
3	9D930	Fuel Charging Wiring
4	9J460	Pressure Feedback EGR (PFE) Sensor
5	9B989	Throttle Position Sensor
6	12A581	Wiring Harness Assy
7	12697	Intake Air Temperature Sensor
8	9F715	Idle Air Control Valve
9	12127	Distributor Assy
10	12029	Coil and Bracket Assy
11	12A648	Coolant Temperature Sensor
12	—	Clamp, Part of 12A581 Wiring Harness Assy

Item	Part Number	Description
13	9E731	Vehicle Speed Sensor
14	9D878	Speed Sensor Wiring
15	—	To Heated Oxygen Sensor
16	—	To Variable Assist Power Steering Motor
17	3N824	Power Steering Pressure Sensor
18	7M101	Turbine Speed Sensor
19	14401	Wiring Harness Assy
20	15520	Neutral Start Switch
21	9C915	Fuel Vapor Canister Purge Regulator Valve
22	9F472	Heated Oxygen Sensor
23	N611057-S2	Screw
24	12860	Mass Air Flow Sensor
25	6C624	Oil Level Sensor

(Continued)

