


REMOVAL AND INSTALLATION (Continued)

Floorpan, RH

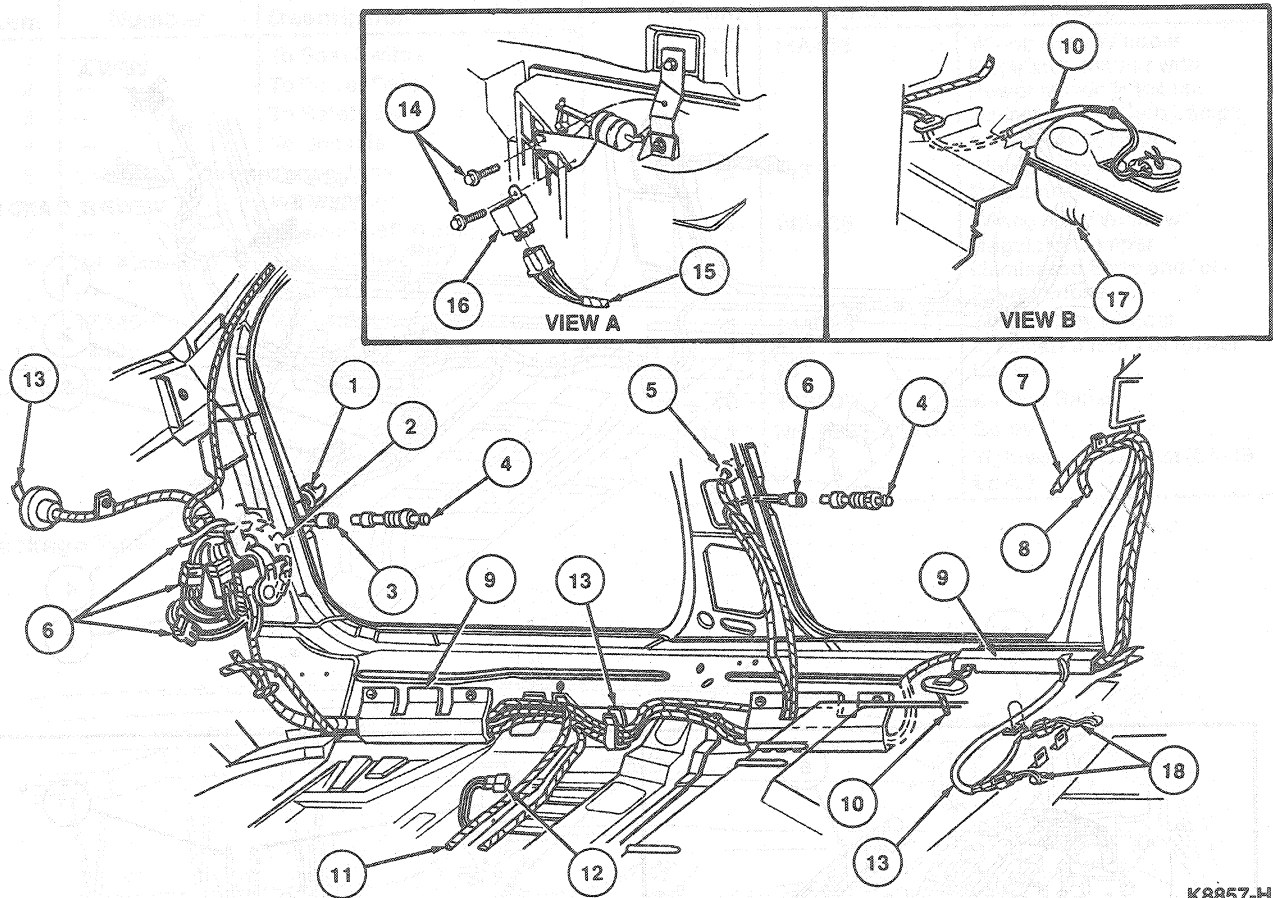

K8857-H

Item	Part Number	Description
1	14630	Wiring Assy
2	15A657	Roof Sliding Panel Control
3	14405	Wiring Assy
4	13713	Courtesy Lamp Switch
5	—	Wiring Assy To RH Rear Door
6	14A488	Wiring Assy
7	19B113	Wiring Assy
8	2C055	Wiring Harness Assy
9	—	Shield

Item	Part Number	Description
10	14405	Wiring Assy To Fuel Pump Sender
11	—	Wiring Assy To LH Floorpan
12	—	Wiring Assy To Seat Wiring
13	—	To Rear Brake Skid Control
14	N801846-S36MG	Screw
15	15A657	Wiring Assy
16	15B683	Moon Roof Motor Relay
17	9002	Fuel Tank
18	—	To LH, RH Rear Anti-Lock Wheel Sensors

(Continued)