

Alphabetical Index

A

Accelerator Pedal and Linkage	10-02-1
Accelerator Cable Bracket	10-02-2
Accelerator Pedal and Shaft Assembly	10-02-2
Diagnosis	10-02-1
Linkage	10-02-1
Removal & Installation	10-02-2
Specifications	10-02-7
Throttle Cable	10-02-3
Air Conditioning System	12-03A-1
A/C Plenum Chamber	12-03A-49
Adjustments	12-03A-72
Ambient Sensor Assy	12-03A-26
Blend Door Actuator	12-03A-31
Blend Door Actuator, Electric	12-03A-7
Blower Motor & Wheel Assy	12-03A-46
Blower Speed Controller	12-03A-6
Blower Switch	12-03A-30
Cold Engine Lock Out Switch (CELO)	12-03A-7
.....	12-03A-30
Components	12-03A-20
Condenser	12-03A-62
Constant Control Relay Module (CCRM)	12-03A-11
Control Assembly	12-03A-4
.....	12-03A-20
Defroster Nozzle & Demister Duct/Hoses	12-03A-52
Description & Operation	12-03A-1
Diagnosis & Testing	12-03A-22
Evaporator Case Assy	12-03A-33
Evaporator Core	12-03A-37
Fixed Orifice Tube	12-03A-61
Heater Core	12-03A-43
Heater Hoses	12-03A-66
Input Sensors	12-03A-5
Normal System Operation (Automatic)	12-03A-9
Pressure Relief Valve	12-03A-9
Recirc Duct Assembly	12-03A-46
Refrigerant Lines	12-03A-63
Register Ducts	12-03A-53
Removal & Installation	12-03A-23
Service Tools	12-03A-75
Specifications	12-03A-74
Spring Lock Coupling	12-03A-62
Suction Accumulator/Drier	12-03A-58
Sunload Sensor Assembly	12-03A-26
System Airflow	12-03A-16
Temperature Control	12-03A-16
Air Intake System	03-12-1
Air Cleaner	03-12-2
Air Filter Element—Replacement	03-12-1
Air Inlet Resonator	03-12-6
Description	03-12-1
Mass Air Flow (MAF) Sensor	03-12-6
Removal & Installation	03-12-1
Specifications	03-12-6
Antenna	15-02-1
Antenna Cable & Base	15-02-2
Antenna with Cable & Mast	15-02-2
Antennas, Manual and Power	15-02-2
Automatic Power Antenna Module	15-02-5
Diagnosis & Testing	15-02-1
Mast, Power	15-02-5
Removal & Installation	15-02-2
Specifications	15-02-5
Audio Systems—Service	15-00-1
Description and Operation	15-00-1
Diagnosis and Testing	15-00-3
Radio	15-00-1
Service Tools	15-00-27

B

Battery	14-01-1
Adding Water	14-01-9
Battery Charging	14-01-4
Battery Cleaning	14-01-8
Battery Drain Test	14-01-3
Battery Tray	14-01-7
Cleaning and Inspection	14-01-8
Maintenance	14-01-8
Removal and Installation	14-01-5
Service Tools	14-01-9
Specifications	14-01-9
Testing	14-01-1
Battery and Charging System—Service	14-00-1
Adjustments	14-00-4
Battery Check	14-00-3
Charging System Test	14-00-3
Description & Operation	14-00-1
Diagnosis	14-00-2
Fuse Link	14-00-2

Alphabetical Index

Preliminary Checks	14-00-2	Diagnosis & Testing	06-09-5
Service Tools	14-00-4	Hydraulic Control Unit	06-09-2
Body Panels, Front End	01-02-1		06-09-65
Adjustments	01-02-8	Master Cylinder	06-09-2
Cowl Vent Screen	01-02-6		06-09-65
Fender, Front	01-02-5	Master Cylinder Reservoir Checking & Filling	06-09-63
Hood	01-02-1	On-Board Diagnostics	06-09-5
Hood Alignment	01-02-8	Operation	06-09-4
Hood Bumpers	01-02-9	Pedal Travel Switch	06-09-4
Hood Hinge	01-02-1		06-09-69
Hood Lift Assist & Support (Gas Cylinder)	01-02-1		06-09-70
Radiator Grille	01-02-2	Removal & Installation	06-09-63
Removal & Installation	01-02-1	Service Tools	06-09-71
Specifications	01-02-9	Specifications	06-09-71
Splash Shield & Insulator	01-02-4	Vacuum Booster	06-09-1
Stone Deflector, Front	01-02-2	Warning Indicator Functions	06-09-5
Body—Service	01-00-1	Wheel Sensors	06-09-3
Adjustments	01-00-9	Brake System, Hydraulic	06-06-1
Appearance Protection	01-00-8	Adjustments	06-06-11
Body Alignment, Unitized	01-00-9	Brake Master Cylinder Reservoir	06-06-6
Body Maintenance	01-00-7	Brake Pedal	06-06-8
Body Misalignment Check	01-00-9	Brake Pressure Control Valve	06-06-6
Body Sealer Types	01-00-2		06-06-13
Cleaning & Inspection	01-00-7	Brake System, Anti-Lock	06-06-1
Diagnosis & Testing	01-00-2	Brake System, Dual	06-06-2
Dust & Water Leaks	01-00-2	Brake Vacuum Booster Push Rod-To-Master Cylinder	06-06-11
Floorpan Plug & Grommets	01-00-7	Fluid Level Indicator	06-06-6
Lower Body Side Stone Protection Vinyl Service	01-00-2	Hydraulic System Bleeding	06-06-12
Paint Repair	01-00-2	Master Cylinder	06-06-1
Rattle Elimination	01-00-7		06-06-6
Repair	01-00-4	Overhaul	06-06-10
Service Tools	01-00-12	Pressure Control Valves	06-06-2
Sheet Metal	01-00-3	Removal & Installation	06-06-6
Trim	01-00-7	Service Tools	06-06-14
Underbody Dimensions	01-00-10	Specifications	06-06-13
Underbody Misalignment Check	01-00-9	Brake System, Parking	06-05-1
Vinyl Insert Moulding Care	01-00-7	Adjustments	06-05-6
Brake System, Anti-Lock	06-09-1	Cable, Front	06-05-4
ABS Module	06-09-3	Cables, Rear	06-05-5
	06-09-6	Control Assembly	06-05-3
	06-09-66	Description	06-05-1
Acid Shield	06-09-2	Diagnosis & Testing	06-05-3
Adjustments	06-09-70	Parking Brake Manual Release Handle & Cable Assembly	06-05-4
Brake Booster Assembly	06-09-63	Removal & Installation	06-05-3
Brake System Bleeding	06-09-5		
Description	06-09-1		

Alphabetical Index

Condenser	12-00-7	Clutch Release Bearing	08-00-4
Description & Operation	12-00-4	Description	08-00-1
Diagnosis & Testing	12-00-12	Diagnosis	08-00-1
Evaporator Core	12-00-9	Dowels, Engine	08-00-3
Fixed Orifice Tube	12-00-9	Pressure Plate and Cover	08-00-5
General Information	12-00-3	Removal & Installation	08-00-3
Heater Core Leak Test	12-00-51		
Refrigerant Recovery	12-00-59	Compressor and Clutch—FX-15	12-03C-1
Refrigerant System Service	12-00-56	Clutch Field Coil	12-03C-6
Refrigerant Systems	12-00-6	Clutch Hub & Pulley	12-03C-4
	12-00-15	Compressor External Leak Test	12-03C-2
Refrigerant-134a (R-134a) Systems	12-00-56	Compressor Manifold Leak Test	12-03C-2
Refrigerant-12 (R-12) System	12-00-56	Compressor Rotating Torque Check	12-03C-3
Safety Precautions	12-00-3	Description & Operation	12-03C-1
Service Gauge Port Valves	12-00-10	Diagnosis & Testing	12-03C-2
Service Precautions	12-00-3	Maintenance	12-03C-10
Service Tools	12-00-64	Manifold & Hose Assembly	12-03C-4
Specifications	12-00-64	Removal & Installation	12-03C-3
Spring Lock Coupling	12-00-7	Service Tools	12-03C-11
Suction Accumulator/Drier	12-00-9	Shaft Seal	12-03C-7
Vacuum System	12-00-13	Specifications	12-03C-11
		Compressor and Clutch—10P15F	12-03B-1
Clock	13-07-1	Clutch Field Coil	12-03B-6
Description & Operation	13-07-1	Clutch Hub & Pulley	12-03B-4
Diagnosis & Testing	13-07-1	Clutch Pulley Bearing	12-03B-6
Removal & Installation	13-07-3	Compressor—Out of Vehicle	12-03B-10
Setting Time	13-07-1	Description & Operation	12-03B-1
		Maintenance	12-03B-2
Clutch Controls	08-02-1	Major Service Operations	12-03B-10
Clutch Cable Assembly	08-02-7	Removal & Installation	12-03B-3
Clutch Control System, Self-Adjusting	08-02-1	Service Tools	12-03B-16
Clutch Pedal Quadrant & Pawl Assembly	08-02-4	Shaft Seal & Seat	12-03B-6
Description & Operation	08-02-1	Specifications	12-03B-15
Diagnosis	08-02-3	Suction or Discharge Manifold	12-03B-3
Removal & Installation	08-02-4	Testing	12-03B-2
Specifications	08-02-9		
Starter/Clutch Interlock Switch	08-02-2		
	08-02-8		
Testing	08-02-2		
Clutch/Pressure Plate	08-01-1		
Clutch Disc and Pressure Plate	08-01-4		
Description & Operation	08-01-1		
Release Bearing	08-01-2		
Release Fork & Lever	08-01-3		
Removal & Installation	08-01-2		
Service Tools	08-01-4		
Specifications	08-01-4		
Clutch System—Service	08-00-1		
Clutch Disc	08-00-4		
		Distributor Ignition (DI)	03-07A-1
		Cleaning & Inspection	03-07A-13
		Description	03-07A-1
		Distributor Assembly	03-07A-4
		Distributor Cap	03-07A-3
		Distributor Rotor	03-07A-3
		Ignition Control Module (ICM)	03-07A-9
		Operation	03-07A-1

D

Distributor Ignition (DI)	03-07A-1
Cleaning & Inspection	03-07A-13
Description	03-07A-1
Distributor Assembly	03-07A-4
Distributor Cap	03-07A-3
Distributor Rotor	03-07A-3
Ignition Control Module (ICM)	03-07A-9
Operation	03-07A-1

Alphabetical Index

Removal & Installation	03-07A-3
Service Tools	03-07A-14
Spark Plug Hole Taperset Installation	03-07A-13
Spark Plug Inspection Chart	03-07A-12
Spark Plug Wires	03-07A-10
	03-07A-13
Spark Plugs	03-07A-11
Specifications	03-07A-14
Tachometer Connection	03-07A-13
Doors, Deck Lid and Liftgate	01-03-1
Adjustments	01-03-8
Door Alignment	01-03-8
Door Hinge Check	01-03-4
Doors	01-03-2
Hinge	01-03-2
Hinge, Liftgate	01-03-9
Liftgate	01-03-6
Lubrication	01-03-1
Luggage Compartment Deck Lid	01-03-6
Luggage Compartment Deck Lid Weatherstrip	01-03-6
Removal & Installation	01-03-2
Service Tools	01-03-9
Specifications	01-03-9
Torsion Bar, Deck Lid Hinge	01-03-8
Torsion Bar Loading	01-03-9
Weatherstrips	01-03-4
Drive Belts, Accessory	03-05-1
Adjustments	03-05-2
Belt Cracking/Chunking	03-05-1
Belt Noise	03-05-2
Description	03-05-1
Diagnosis	03-05-1
Generator Belt	03-05-2
Power Steering, A/C Belt	03-05-4
Removal & Installation	03-05-3
Service Tools	03-05-5
Specifications	03-05-5

E

Electrical Devices—Miscellaneous	18-04-1
Ash Receptacle & Retainer Assembly	18-04-1
Cigar Lighter	18-04-2
Diagnosis	18-04-1

Electronic Ignition (EI) — High Data Rate System, Flexible Fuel (FF)	03-07C-1
Adjustments	03-07C-8
Camshaft Position Sensor (CMP)	03-07C-3
Cleaning & Inspection	03-07C-7
Coil Pack Bracket	03-07C-5
Crankshaft Position (CKP) Sensor Assembly	03-07C-4
Description & Operation	03-07C-1
Diagnosis & Testing	03-07C-4
Electronic Ignition (EI) Coil Pack	03-07C-5
Ignition Coil Pack	03-07C-3
	03-07C-7
Ignition Control Module (ICM)	03-07C-2
	03-07C-5
Ignition Control Module (ICM) Bracket	03-07C-6
Removal & Installation	03-07C-4
Service Tools	03-07C-8
Spark Plug Wires	03-07C-6
	03-07C-7
Specifications	03-07C-8
Electronic Ignition (EI) System	03-07B-1
Adjustments	03-07B-8
Camshaft Position (CMP) Sensor	03-07B-2
Camshaft Position (CMP) Sensor Assembly	03-07B-5
Cleaning & Inspection	03-07B-8
Crankshaft Position (CKP) Sensor	03-07B-1
Crankshaft Position (CKP) Sensor Assembly	03-07B-5
Description & Operation	03-07B-1
Diagnosis & Testing	03-07B-5
Ignition Coil Pack	03-07B-2
	03-07B-6
Ignition Coils	03-07B-8
Ignition Control Module (ICM)	03-07B-2
	03-07B-6
Ignition Diagnostic Monitor	03-07B-2
Removal & Installation	03-07B-5
Service Tools	03-07B-8
Spark Plug Wires	03-07B-7
	03-07B-8
Specifications	03-07B-8
Engine and Transaxle Mounting	02-03-1
Engine Mounts, 3.0L EFI Engine	02-03-4
Engine Mounts, 3.0L SHO Engine	02-03-1
Engine Mounts, 3.8L EFI Engine	02-03-6
Insulator, LH & Support Assembly No. 1A	02-03-2
Insulator, RH Front, No.2 and/or RH Rear, No.3	02-03-4

Alphabetical Index

Removal & Installation	02-03-1	Main & Connecting Rod Bearings	03-00-16
Service Tools	02-03-9	Oil Pan	03-00-23
Specifications	02-03-8	Oil Pump	03-00-22
Transaxle Hydramount Assembly, LH	02-03-7	Overhaul	03-00-13
Engine Cooling	03-03-1	Pistons, Pins & Rings	03-00-18
Cleaning	03-03-32	Push Rods	03-00-29
Cooling Fan	03-03-6	Service Tools	03-00-30
Cooling System Pressure Test	03-03-10	Tappets, Hydraulic	03-00-21
Description & Operation	03-03-1	Valve Clearance	03-00-11
Diagnosis & Testing	03-03-9	Valve Rocker Arm	03-00-29
Draincock Replacement	03-03-31	Valves, Refacing	03-00-27
Fan, Motor and Constant Control Relay			
Module (CCRM)	03-03-16	Engine, 3.0L/3.0L FF	03-01A-1
Inspection	03-03-33	Camshaft	03-01A-46
Oil Cooler Transfer or Replacement	03-03-30	Camshaft Bearings	03-01A-50
Radiator	03-03-10	Connecting Rod Bearings	03-01A-36
Radiator Core	03-03-32	Crankshaft	03-01A-44
Radiator Hose	03-03-27	Crankshaft Pulley/Damper/Front Oil Seal	03-01A-6
Radiator Pressure Cap	03-03-33	Crankshaft Rear Oil Seal	03-01A-2
Radiator Tank	03-03-28	Cylinder Heads	03-01A-17
Removal & Installation	03-03-10		03-01A-63
Service Procedures	03-03-32	Description & Operation	03-01A-1
Service Tools	03-03-37	Disassembly & Assembly	03-01A-51
Specifications	03-03-36	EGR Valve, Tube & Fitting/Orifice	03-01A-30
Testing	03-03-10	Emission Calibration Label	03-01A-2
Thermostat	03-03-9	Engine Assembly	03-01A-38
	03-03-20	Engine Identification	03-01A-1
Water Pump	03-03-22	Engine Lifting/Support Points	03-01A-38
Water Pump Inlet Tube Assembly	03-03-28	Exhaust Manifold, LH/RH	03-01A-33
Engine—Service	03-00-1	Flywheel	03-01A-43
Adjustments	03-00-11	Front Cover	03-01A-8
Camshaft	03-00-21	Inspection	03-01A-63
Camshaft End Play	03-00-9	Intake Manifold	03-01A-14
Camshaft Lobe Lift	03-00-8	In-Vehicle Service	03-01A-2
Connecting Rods	03-00-20	Main Bearing Inserts	03-01A-34
Core Plugs	03-00-15	Oil Pan & Oil Pump	03-01A-25
Crankshaft	03-00-17	Pistons & Connecting Rods	03-01A-24
Crankshaft End Play	03-00-10		03-01A-61
Cylinder Block	03-00-13	Removal & Installation	03-01A-38
Cylinder Heads	03-00-23	Rocker Arm Cover	03-01A-12
Diagnosis & Testing	03-00-3	Sensors	03-01A-27
Engine Identification	03-00-2	Service Tools	03-01A-68
Engine Oil Leaks	03-00-3	Specifications	03-01A-65
Exhaust Emission Control System	03-00-2	Subassemblies	03-01A-61
Exhaust Manifolds	03-00-30	Tappet	03-01A-22
Flywheel	03-00-30	Thermostat	03-01A-16
Hydraulic Tappet/Lash Adjuster	03-00-8	Throttle Body	03-01A-3
Intake Manifolds	03-00-30	Timing Chain	03-01A-32
		Water Pump	03-01A-10

Alphabetical Index

Testing	11-00-2
Subframe	02-01-1
Removal & Installation	02-01-1
Service Tools	02-01-3
Specifications	02-01-3
Suspension and Wheel Ends, Front	04-01-1
Adjustments	04-01-17
Component Replacement	04-01-2
Components	04-01-2
Control Arm, Lower	04-01-6
Control Arm-to-Tension Strut Insulator, Lower	04-01-7
Description	04-01-1
Hub & Wheel Bearings	04-01-9
Inner Pivot Bushing	04-01-6
Removal & Installation	04-01-6
Service Tools	04-01-18
Shock Absorber Strut, Spring, Bearing and Seat Assembly and Upper Mount	04-01-12
Specifications	04-01-17
Stabilizer Bar/Link Assembly and/or Insulators	04-01-8
Steering Knuckle	04-01-16
Suspension Fasteners	04-01-3
Tension Strut-to-Subframe Insulators	04-01-8
Wheel Assembly	04-01-5
Wheel Bearings	04-01-17
Suspension and Wheel Ends, Rear	04-02-1
Anti-Lock Sensor Ring	04-02-30
Bearing & Hub Assembly, Disc Brakes	04-02-29
Bearing & Hub Assembly, Drum Brakes	04-02-29
Component Replacement	04-02-4
Components	04-02-3
Control Arm	04-02-28
Description & Operation	04-02-1
Removal & Installation	04-02-12
Service Tools	04-02-32
Shock Absorber	04-02-12
Specifications	04-02-31
Springs	04-02-25
Stabilizer Bar, Insulators and Link Assembly	04-02-16
Suspension Arm, Lower	04-02-21
Suspension Arms, Upper	04-02-19
Tension Strut	04-02-21
Wheel Assembly	04-02-8
Suspension—Service	04-00-1
Adjustments	04-00-3

Ball Joint, Lower	04-00-2
Camber, Rear	04-00-7
Caster & Camber, Front	04-00-5
Service Tools	04-00-11
Shock Absorber Checks	04-00-2
Specifications	04-00-9
Steering Pull/Drift	04-00-7
Suspension, Front	04-00-1
Suspension, Rear	04-00-2
Toe, Front	04-00-6
Toe, Rear	04-00-9
Wheel Alignment, Rear	04-00-9
Wheel Turning Angle, Front	04-00-7

T

Tachometer, Oil Pressure, Coolant Temperature

Gauges/Warning Indicators	13-05-1
Coolant Temperature Sending Unit	13-05-8
Description & Operation	13-05-1
Diagnosis & Testing	13-05-3
Engine Oil Pressure	13-05-3
Indicator Bulb	13-05-8
Magnetic Temperature Gauge	13-05-2
Oil Pressure Indicator	13-05-2
Removal & Installation	13-05-6
Service Tools	13-05-9
Specifications	13-05-8
Tachometer	13-05-1
	13-05-6

Transaxle, Automatic—AXODE

.....	07-01-1
Air Pressure Checks	07-01-85
Cleaning & Inspection	07-01-184
Control Pressure Test	07-01-52
Converter Leakage Check	07-01-84
Description & Operation	07-01-2
Diagnosis & Testing	07-01-28
Diagnostic Hydraulic/Mechanical Chart Instructions	07-01-28
Disassembly & Assembly	07-01-96
Downshifts	07-01-15
Exploded View	07-01-16
	07-01-17
Fluid Leakage in Converter Area	07-01-83
Identification Tag	07-01-15
Installation	07-01-182

Alphabetical Index

Road Test	00-04-4
Service Tools	00-04-14

P

Phone, Cellular	15-04-1
Component Location	15-04-5
Description & Operation	15-04-1
Diagnosis & Testing	15-04-3
Dual Phone Numbers	15-04-3
Programming	15-04-2
System/Carrier Concerns	15-04-4

R

Radio and Tape Chassis	15-01-1
Cassette Tape Player	15-01-5
Cleaning	15-01-13
Control Functions	15-01-1
Description & Operation	15-01-1
JBL Amplifier	15-01-8
JBL Suppression Choke	15-01-12
Premium Sound Amplifier (Low & High-Level)	15-01-8
Radio & Digital Disc Player	15-01-7
Radio Interference Suppression	15-01-10
Removal & Installation	15-01-7
Service Tools	15-01-13
Specifications	15-01-13
Tape Error Messages	15-01-5
Restraints, Active	01-20A-1
Adjustments	01-20A-15
Auxiliary Seat, Station Wagon	01-20A-2
Belt Buckle	01-20A-2
Child Restraint — Tether Attachment	01-20A-2
Child Seat Installation with Locking Clip	01-20A-17
Cleaning & Inspection	01-20A-13
Description & Operation	01-20A-1
Lap/ Shoulder Safety Belts, Center	01-20A-2
Lap/Shoulder Safety Belt, Front	01-20A-2
Lap/Shoulder Safety Belt, Rear	01-20A-2
01-20A-9	
Lap/Shoulder Safety Belt Retractor Assembly, Front	01-20A-6

Location	01-20A-3
Major Service Operations	01-20A-13
Removal & Installation	01-20A-6
Safety Belt, Auxiliary Seat	01-20A-12
Safety Belt Maintenance	01-20A-13
Safety Belts, Rear	01-20A-9
Service Tools	01-20A-18
Specifications	01-20A-18
Tether Attachment	01-20A-4

Restraints, Passive—Supplemental Air Bag

System	01-20B-1
Air Bag Modules	01-20B-9
Deployed Air Bags	01-20B-11
01-20B-71	
Description	01-20B-1
Diagnosis and Testing	01-20B-12
Diagnostic Monitor	01-20B-4
01-20B-68	
Diagnostic Trouble Code Table	01-20B-16
Disposal Procedures	01-20B-71
Driver Air Bag	01-20B-2
Electrical Schematic — Air Bag System	01-20B-14
Electrical System	01-20B-6
Glossary	01-20B-13
Live Air Bags	01-20B-11
Location of Air Bag System Components	01-20B-13
Module, Driver Air Bag	01-20B-68
Module, Passenger Air Bag	01-20B-69
Parts Replacement	01-20B-9
Passenger Air Bag, Optional	01-20B-3
Removal and Installation	01-20B-66
Sensor, Center Cowl Crash	01-20B-67
Sensor — Center Radiator	01-20B-66
Sensor, LH Kick Panel Safing	01-20B-67
Sensors	01-20B-6
Service of Air Bag Equipped Vehicles Involved	
In Collisions	01-20B-10
Service Precautions	01-20B-11
Service Tools	01-20B-73
Specifications	01-20B-73
Undeployed Air Bag — Faulty	01-20B-71
Warning Labels	01-20B-8

S

Seat, Articulated Sport	01-10B-1
Air Pump/Motor	01-10B-9

Alphabetical Index

Main Components & Functions	07-01-3	Shift Control Cable Assembly	07-05-5
Oil Pump & Main Control Assembly	07-01-182	Shift Knob	07-05-3
On-Board Diagnostic Quick Tests	07-01-53	Shift Lever & Housing Assembly	07-05-5
Parts Cross-Reference	07-01-189	Specifications	07-05-9
Preliminary Testing & Diagnosis	07-01-61	Transaxle, Manual—MTX IV	07-03-1
Removal	07-01-88	Bearing Cups	07-03-53
Removing the Transmission Tester & Clearing		Cleaning & Inspection	07-03-50
DTC's	07-01-63	Clutch Housing	07-03-39
Service Tools	07-01-187	Description	07-03-1
Shift Point Road Test	07-01-81	Differential	07-03-11
Specifications	07-01-186	Disassembly & Assembly	07-03-31
Speedometer Drive Assembly	07-01-185	Exploded View	07-03-3
Stall Test	07-01-85	Fifth Gear Shaft Assembly	07-03-37
Subassemblies	07-01-113	Fifth Gear Shift Control	07-03-44
Torque Converter End Play Check	07-01-87	Flywheel	07-03-30
Torque Converter Reactor One-Way Clutch			07-03-51
Check	07-01-86	Flywheel Ring Gear	07-03-30
Transaxle	07-01-89	Gearset	07-03-20
	07-01-183	Input Cluster Shaft Bearings	07-03-52
	07-01-184	Input Cluster Shaft Seal Assembly	07-03-52
Transaxle Assembly	07-01-160	Main Shaft Assembly	07-03-31
Transaxle Disassembly	07-01-96		07-03-34
Transaxle Fluid Condition Check	07-01-82	Main Shift Control Shaft	07-03-42
Transaxle Fluid Cooler Flow Test	07-01-84	Major Service Operations	07-03-52
Transaxle Fluid Drain & Refill	07-01-88	Power Flow	07-03-8
Transaxle Fluid Leakage Checks	07-01-82	Removal & Installation	07-03-16
Transaxle Fluid Level Check	07-01-81	Reverse Shift Relay Lever & Bracket	07-03-45
Transaxle, Automatic—Cooling	07-02-1	Selector Control Plate	07-03-45
Diagnosis & Testing	07-02-1	Service Tools	07-03-63
Oil Cooler Steel Lines	07-02-1	Shift Controls	07-03-8
Service Procedures	07-02-1	Shift Knob, Boot & Control Assembly	07-03-56
Service Tools	07-02-3	Specifications	07-03-62
Specifications	07-02-3	Speedometer Driven Gear	07-03-55
Transaxle, Automatic—External Controls	07-05-1	Synchronizer	07-03-33
Adjustments	07-05-8	Transaxle Noise	07-03-11
Bezel Assembly	07-05-4	Trim, Exterior	01-08-1
Brake-Shift Interlock	07-05-1	Body Side Protection & Bumper Rubstrip	
Column Shift	07-05-8	Mouldings	01-08-1
Description & Operation	07-05-1	Mouldings, Exterior	01-08-2
Diagnosis	07-05-2	Removal & Installation	01-08-1
Floor Shift	07-05-3	Roof Luggage Carrier	01-08-2
	07-05-8	Specifications	01-08-6
Indicator Bulb	07-05-5	Trim, Interior	01-05-1
Interlock Cable Assembly	07-05-6	Auxiliary Visor Assembly	01-05-18
Manual Linkage	07-05-8	Carpets & Floor Mats	01-05-21
Overdrive Lockout	07-05-2	Description	01-05-1
PRNDL Cable Adjustment	07-05-8	End Cap Replacement, Roll-Up Type	01-05-25
Removal & Installation	07-05-3		

Alphabetical Index

Headlining	01-05-19
Luggage Cover	01-05-24
Moulding, A-Pillar	01-05-15
Removal & Installation	01-05-1
Retractable Spring Rewinding	01-05-24
Service Tools	01-05-26
Specifications	01-05-26
Sun Visors	01-05-17
Trim Panel, Liftgate	01-05-13
Trim Panel, Luggage Compartment	01-05-14
Trim Panel, Package Tray	01-05-23
Trim Panel, Quarter	01-05-7
Trim Panels, Cowl Side	01-05-6
Trim Panels, Door	01-05-1
Trim Panels, Scuff Plate/Lower Body Center	01-05-5

W

Arm Assembly, Front	01-16-21
Description & Operation	01-16-1
Diagnosis & Testing	01-16-7
Fluidic Washer Nozzle	01-16-28
Fluidic Washer System	01-16-6
Pivot Shafts & Wiper Linkage, Front	01-16-23
Pump Assembly	01-16-26
Removal & Installation	01-16-18
Service Tools	01-16-33
Specifications	01-16-32
Washer Circuit	01-16-9
Washer Hose, Rear	01-16-26
Washer Pump & Reservoir Assembly, Front	01-16-25
Washer Pump & Reservoir Assembly, Rear	01-16-27
Windshield Washer Low Fluid Warning Indicator	01-16-5
Wiper Arm & Blade Assembly, Rear	01-16-24
Wiper Blades	01-16-22
Wiper Circuit	01-16-8
Wiper Control Module (WCM)	01-16-19
Wiper Motor, Front	01-16-18
Wiper/Washer Switch, Rear	01-16-20

Wheels and Tires	04-04-1
Adjustments	04-04-7
Cleaning & Inspection	04-04-6
Description	04-04-1
Hoisting	04-04-5
Removal & Installation	04-04-5
Service Tools	04-04-13
Spare Tire, Lightweight Temporary	04-04-4
Specifications	04-04-13
Steel Wheels	04-04-7
Tire	04-04-6
Tire and Wheel Balance	04-04-10
Tire Inflation	04-04-8
Tire Maintenance	04-04-8
Tire Replacement	04-04-10
Tire Rotation	04-04-9
Tire Service	04-04-10
Tire Sizes	04-04-7
Tread Wear Indicators	04-04-9
Wheelcovers	04-04-2
Wheel and Tire	04-04-5
Wheel and Tire Indexing	04-04-9
Wheel Bearing, Front	04-04-13
Wheel Lug Nuts	04-04-4
Wheel Ornaments	04-04-6

Wiring and Circuit Protection	18-01-1
Alternator Connectors	18-01-8
Component Connectors	18-01-8
Deck Lid	18-01-34
Diagnosis & Testing	18-01-4
Distributor Ignition (DI) Module	18-01-9
Door, Front	18-01-32
Door, Rear	18-01-33
Engine Wiring	18-01-17
Fender Apron, LH	18-01-15
Fuse Link Continuity Test	18-01-4
Fuse Links	18-01-4
Fuse Panel	18-01-4
Fuses & Circuit Breakers	18-01-2
In-Line Connector, Submersible	18-01-7
In-Line Connectors	18-01-7
Instrument Panel, Main	18-01-23
Liftgate	18-01-34
Package Tray	18-01-29
Power Distribution Box	18-01-6
Radiator Support Wiring	18-01-10
Removal & Installation	18-01-4
Roof	18-01-31
Service Tools	18-01-37
Specifications	18-01-37

Wiper and Washer Systems	01-16-1
Adjustments	01-16-29
Arm & Blade Assembly	01-16-29

Alphabetical Index

Bench Tests	03-06-6	Switch, Ignition	11-05-1
Description and Operation	03-06-1		11-05-06
Diagnosis & Testing	03-06-3	Switch, Multi-Function	11-05-2
Disassembly & Assembly	03-06-7		11-05-6
Exploded View	03-06-8	Turn Signal Switching	11-05-2
Jump Starting	03-06-2	Windshield Washer Switching	11-05-2
Removal & Installation	03-06-7	Windshield Wiper Switching	11-05-2
Road Service	03-06-2		
Service Tools	03-06-12	Steering System, Power	11-02-1
Specifications	03-06-11	Adjustments	11-02-68
Starter Drive Replacement	03-06-9	Atsugi Steering Pump	11-02-10
Starter Load Test	03-06-4	Cleaning & Inspection	11-02-67
Starter Motor	03-06-7	Description	11-02-1
Starter Motor Brushes Replacement	03-06-9	Diagnosis & Testing	11-02-12
Exploded View	03-06-8	Disassembly & Assembly	11-02-44
		External Leakage	11-02-14
Steering Column	11-04-1	Gear Housing, Rack Yoke Plug, Rack Assembly, Rack Bushing & Oil Seals	11-02-55
Adjustments	11-04-27	Input Shaft & Valve Assembly	11-02-48
Brake Shift Interlock Solenoid	11-04-14	Operation	11-02-11
Contact Assembly	11-04-9	Power Steering Pump	11-02-28
Description	11-04-1	Pressure & Return Line Fitting	11-02-39
Diagnosis & Testing	11-04-6		11-02-46
Disassembly & Assembly	11-04-17		11-02-60
Exploded View	11-04-2	Pressure & Return Lines	11-02-34
Gear Shift Lever, Cover and/or Shift Lever Clip	11-04-12	Pump Reservoir	11-02-41
Ignition Lock Cylinder	11-04-13	Remote Reservoir	11-02-28
Ignition Lock Cylinder Assembly	11-04-9	Removal & Installation	11-02-28
Removal & Installation	11-04-8	Rotary Valve	11-02-11
Service Tools	11-04-28	Service Tools	11-02-72
Shaft Bearing, Intermediate	11-04-15	Specifications	11-02-71
Shaft Bearing, Lower	11-04-16	Steering Gear	11-02-1
Shaft Bearing, Upper	11-04-14		11-02-29
Specifications	11-04-27		11-02-46
Steering Shaft, Intermediate	11-04-12	Steering Pump	11-02-61
Steering Wheel	11-04-8	Tie Rod End Replacement	11-02-28
Tilt Lock Lever	11-04-8	VAPS Module	11-02-43
		Variable Assist Power Steering (VAPS)	11-02-5
Steering Column Switches	11-05-1	Steering System—Service	11-00-1
Cornering Lamp Switching	11-05-2	Cleaning & Inspection	11-00-15
Description & Operation	11-05-1	Description	11-00-1
Diagnosis & Testing	11-05-3	Diagnosis	11-00-6
Flasher Unit	11-05-7	Power Steering Pump Model Identification	11-00-1
Hazard Flashing Switching	11-05-2	Preliminary Tests	11-00-2
Headlamp Dimmer/Flash-to-Pass Switching	11-05-2	Pump Flow & Pressure Test	11-00-2
Removal & Installation	11-05-6	Purging Power Steering System of Air	11-00-5
Service Tools	11-05-8	Service Tools	11-00-13
Specifications	11-05-8	Specifications	11-00-13
Switch, Blade-Type	11-05-1		

Alphabetical Index

Back Trim Cover, Front Seat	01-10B-3	Control Switches	10-03A-39
Cushion, Front Seat	01-10B-7	Control Switches Test	10-03A-4
Description	01-10B-1	Description	10-03A-1
Diagnosis	01-10B-2	Diagnosis & Testing	10-03A-3
Lumbar & Bolster Support	01-10B-1	Linkage Actuator Cable	10-03A-44
Lumbar Support Pad	01-10B-8	Operation	10-03A-3
Operation	01-10B-1	Pinpoint Tests	10-03A-21
Removal & Installation	01-10B-3	Removal & Installation	10-03A-34
Specifications	01-10B-9	Service Tools	10-03A-46
Seats and Tracks	01-10A-1	Specifications	10-03A-45
Adjustments	01-10A-32	Speed Control Amplifier Assembly	10-03A-38
Diagnosis	01-10A-4	Speed Control Metering (Dump) Valve	10-03A-3
Head Restraint, Front Seat	01-10A-22		10-03A-39
Head Restraints	01-10A-2		10-03A-45
Power Seat	01-10A-3	Speed Control Servo Assembly	10-03A-34
Recliner, Manual	01-10A-2	Speed Control Tester	10-03A-9
Removal & Installation	01-10A-6	Vacuum Reservoir	10-03A-41
Seat Back, Front	01-10A-22	VSS	10-03A-38
Seat Back Latch, Rear — Wagon	01-10A-17	VSS Test	10-03A-7
Seat Back Trim Cover, Front	01-10A-25	Speed Control System — 3.2L SHO	10-03B-1
Seat Back Trim Cover, Rear	01-10A-29	Actuator Cable	10-03B-10
Seat Control Switch	01-10A-13		10-03B-14
Seat Cushion, Rear	01-10A-13	Adjustments	10-03B-14
Seat Cushion Trim Cover, Front	01-10A-26	Clockspring Assembly	10-03B-13
Seat, Rear — Center Armrest Cover	01-10A-31	Control Switches	10-03B-12
Seat, 6-Way Power	01-10A-1	Deactivator Switch	10-03B-1
Seat Track, Manual	01-10A-1	Description	10-03B-1
Seat Track, 6-Way Power	01-10A-7	Diagnosis & Testing	10-03B-2
Seats—Bucket and Split Bench, Manual	01-10A-6	Operation	10-03B-2
Service Tools	01-10A-33	Removal & Installation	10-03B-9
Specifications	01-10A-32	Service Tools	10-03B-16
Testing	01-10A-3	Servo and Bracket Assembly	10-03B-9
Wagon Second Seats	01-10A-2	Specifications	10-03B-15
Speakers	15-03-1	System Activation	10-03B-2
Description	15-03-1	Vehicle Speed Sensor	10-03B-1
Diagnosis & Testing	15-03-1		10-03B-12
Package Tray Mount	15-03-5	Speedometer/Odometer	13-02-1
Poor Sound Quality	15-03-3	Description & Operation	13-02-1
Speakers, Door Mounted	15-03-4	Diagnosis & Testing	13-02-1
Speakers, Rear	15-03-4	Major Service Operations	13-02-5
Speed Control System — 3.0L MFI, 3.0L SHO,		Removal & Installation	13-02-3
3.8L	10-03A-1	Specifications	13-02-5
Actuator Cable	10-03A-37	Speedometer Assembly	13-02-3
Adjustments	10-03A-44	Speedometer Cables	13-02-3
Check Valve	10-03A-42	Vehicle Speed Sensor (VSS)	13-02-3
Clockspring Assembly	10-03A-40	Starting System—Gear Reduced Permanent	
Clutch Switch	10-03A-41	Magnet	03-06-1
	10-03A-45	Armature Replacement	03-06-10

Alphabetical Index

Filler Pipe	10-01-13
Flexible Fuel Mixer/Sensor Assembly	10-01-18
Fuel Filter	10-01-18
Fuel Lines—Nylon	10-01-13
Fuel Pump & Sender Assembly	10-01-18
Fuel System Pressure Relief	10-01-6
Fuel Tank	10-01-6
Fuel Tank Draining Procedure — Flexible Fuel Vehicles	10-01-6
Fuel Tank Straps	10-01-13
Major Service Operations	10-01-21
Push Connect Fittings	10-01-14
Removal & Installation	10-01-5
Service Tools	10-01-23
Specifications	10-01-22
Spring Lock Coupling	10-01-15

G

Gauges, Warning Devices, Miscellaneous—

Electronic	13-09-1
Description & Operation	13-09-1
Diagnosis & Testing	13-09-3
Lamp-Out Warning Module	13-09-17
Lamp-Out Warning System	13-09-1
	13-09-8
Low Oil Level Warning System	13-09-2
Removal & Installation	13-09-17
Service Tools	13-09-19
Specifications	13-09-19
Warning Chimes	13-09-1
	13-09-17

Generator, Integral Rear Mount Regulator—

Internal Fan Type	14-02A-1
Battery Drain Test	14-02A-3
Charging System Tests	14-02A-4
Description & Operation	14-02A-1
Diagnosis & Testing	14-02A-2
Disassembly & Assembly	14-02A-15
Generator	14-02A-14
Generator Circuit	14-02A-2
Regulator	14-02A-14
Removal & Installation	14-02A-13
Service Tools	14-02A-15

Specifications	14-02A-15
----------------------	-----------

Generator, Integral Regulator—Internal Fan and Regulator Type

14-02B-1	
Adjustments	14-02B-17
Bearing Replacement	14-02B-16
Charging System	14-02B-1
Circuit Description	14-02B-2
Description	14-02B-1
Diagnosis & Testing	14-02B-3
Disassembly & Assembly	14-02B-13
Generator	14-02B-1
	14-02B-12
On-Bench Tests	14-02B-9
On-Vehicle Tests	14-02B-3
Operation	14-02B-2
Removal & Installation	14-02B-11
Service Tools	14-02B-17
Specifications	14-02B-17

Glass, Frames and Mechanisms

01-11-1	
Adjustments	01-11-27
Defroster, Rear	01-11-2
	01-11-9
	01-11-25
Door Glass, Front	01-11-10
	01-11-27
Door Glass, Rear	01-11-10
	01-11-28
Glass & Channel Assembly, Rear Door	01-11-15
Grid Wire Service	01-11-26
Liftgate Glass	01-11-24
Lubrication	01-11-6
Major Service Operations	01-11-26
Mouldings	01-11-16
Quarter Window	01-11-20
Relay/Timer	01-11-26
Removal & Installation	01-11-10
Service Tools	01-11-29
Specifications	01-11-29
Switch	01-11-23
Testing	01-11-6
Window Motor	01-11-6
	01-11-24
Window Regulator, Front	01-11-13
Window Regulator, Rear	01-11-13
Window Switches	01-11-1
Windshield/ Rear Window Glass — Urethane Seal	01-11-16

Alphabetical Index

Official Vehicle Identification Number	00-01-1
Vehicle Certification Label	00-01-1
Instrument Cluster—Conventional	13-01B-1
Bulb, Illumination	13-01B-6
Description & Operation	13-01B-1
Diagnosis & Testing	13-01B-3
Flexible Printed Circuit	13-01B-6
Instrument Cluster	13-01B-4
Low Fuel Warning Assembly, Electronic	13-01B-6
Removal & Installation	13-01B-4
Specifications	13-01B-6
Instrument Cluster—Electronic	13-01A-1
Charging System	13-01A-7
Cluster Assembly	13-01A-30
Coolant Temperature Sender	13-01A-8
Description & Operation	13-01A-1
Diagnosis & Testing	13-01A-5
Dimmer Circuit	13-01A-6
Electronic Low Fuel Warning Assembly	13-01A-32
Fuel Computer	13-01A-4
Fuel Gauge	13-01A-6
Fuel Lines	13-01A-31
Fuel Pump & Sender Unit Assembly	13-01A-31
Lamp Out Warning	13-01A-6
Oil Level Warning	13-01A-9
Oil Pressure Switch	13-01A-33
Mask Assembly	13-01A-30
Removal & Installation	13-01A-30
Service Tools	13-01A-34
Specifications	13-01A-34
Speedometer	13-01A-5
Switch Module	13-01A-1
System Scanner	13-01A-5
Tachometer Circuit	13-01A-7
Windshield Washer Level	13-01A-8
Instrument Panel and Console	01-12-1
Air Bag System	01-12-2
Cluster Finish Panel	01-12-12
Console Armrest	01-12-16
Console Assembly, Floor	01-12-15
Console Assembly, Roof	01-12-16
Deployed Air Bags	01-12-1
Disassembly & Assembly	01-12-17
Instrument Panel	01-12-2
Live Air Bags	01-12-1
Parts Replacement	01-12-2
Removal & Installation	01-12-2

Service Precautions	01-12-1
Specifications	01-12-24
Steering Column	01-12-2

K

Keyless Entry System	01-14B-1
Antenna	01-14B-33
Autolock	01-14B-3
Description	01-14B-1
Diagnosis	01-14B-4
Entry Code	01-14B-2
Keyless Keypad	01-14B-3
Keypad Actuator Assembly	01-14B-32
Microprocessor/Relay Module	01-14B-32
Operation	01-14B-2
Remote/Keyless Entry Schematic	
Diagrams	01-14B-7
Remote Transmitter Operation	01-14B-3
Removal & Installation	01-14B-32
Service Tools	01-14B-34
Transmitter	01-14B-2
Transmitter Battery	01-14B-34

L

Lifting, Jacking, Spare Tire Stowage and	
Emergency Towing	00-02-1
Flatbed Towing	00-02-3
Front—T-Hook Procedure	00-02-3
Hoist, Drive-On	00-02-1
Hoist, Frame Contact	00-02-2
Hoisting & Jacking	00-02-1
Hoisting Instructions	00-02-1
Jack, Floor	00-02-1
Rear—T-Hook Procedure	00-02-4
Spare Tire	00-02-4
Tire Stowage	00-02-4
Towing	00-02-2
Towing Slings	00-02-2
Towing Speeds	00-02-2
Lighting, Exterior	17-01-1
Adjustments	17-01-30
Bulb Replacement, Headlamp	17-01-18

Alphabetical Index

H

Halfshafts, Front Drive	05-04-1
CV Joint Boot Indentation	05-04-8
Description	05-04-1
Diagnosis	05-04-8
Disassembly & Assembly	05-04-15
Halfshaft Assembly	05-04-9
Inboard CV Joint	05-04-24
Inspection	05-04-8
Link Shaft/Halfshaft — SHO Manual	05-04-34
Operation	05-04-7
Outboard CV Joint & Boot	05-04-15
Outboard CV Joints Dust Seal	05-04-22
Removal & Installation	05-04-9
Service Tools	05-04-37
Specifications	05-04-36
Speed Indicator Ring	05-04-23
Wheel & Tire Balancing, Front	05-04-7
Handles, Locks, Latches and Mechanisms	01-14A-1
Adjustments	01-14A-18
Child Safety Lock	01-14A-2
Diagnosis & Testing	01-14A-2
Door Latch Bellcrank, Rear	01-14A-9
Door Latch, Front	01-14A-5
Door Latch, Rear	01-14A-7
Door Latch Remote Control, Front or Rear	01-14A-9
Door Lock Cylinder	01-14A-9
Door Lock Switch, Power	01-14A-4
Door Locks, Power	01-14A-1
Door Outside Handle	01-14A-9
Door Striker	01-14A-10
Glove Compartment Latch & Lock	01-14A-18
Hood Latch	01-14A-12
Hood Latch Control Cable	01-14A-11
Latch and Cable, Fuel Filler Door Remote	01-14A-10
Latch & Lock, Luggage Compartment Deck	
Lid	01-14A-13
Latch & Striker, Liftgate	01-14A-14
Latch Striker Assembly, Luggage Compartment	
Deck Lid	01-14A-13
Lock Cylinder	01-14A-16
Lubrication	01-14A-19
Luggage Compartment Remote Control	
Cable & Latch	01-14A-17
Motor	01-14A-2
Remote Luggage Compartment Release	01-14A-16

Removal & Installation	01-14A-4
Service Tools	01-14A-20
Specifications	01-14A-19
Striker Anchor Plate	01-14A-16
Support Cylinder, Liftgate	01-14A-14
Heating and Defrosting	12-02-1
Adjustments	12-02-24
Air Inlet Duct & Blower Housing Assembly	12-02-21
Airflow	12-02-1
Airflow Schematic	12-02-2
Blower Motor & Wheel Assembly	12-02-13
Blower Motor Resistor	12-02-14
Blower Switch	12-02-10
Components	12-02-6
Control Assembly	12-02-3
	12-02-6
	12-02-9
Defroster Nozzle	12-02-17
Demisters & Demister Hoses	12-02-18
Description & Operation	12-02-1
Floor Air Distribution Duct	12-02-19
Floor Heater System	12-02-19
Floor-Panel Door Vacuum Motor	12-02-21
Heater Case Assembly	12-02-10
Heater Core	12-02-9
	12-02-12
Heater Hoses	12-02-22
Outside-Recirc Door Vacuum Motor	12-02-14
Panel-Defrost Door Vacuum Motor	12-02-21
Plenum Chamber & Duct Assembly	12-02-15
Recirc Duct Assembly	12-02-13
Removal & Inspection	12-02-9
Safety Precautions	12-02-6
Service Tools	12-02-25
Specifications	12-02-24
Temperature Control	12-02-4
Vacuum Selector Switch	12-02-10
Horn	13-06-1
Backup Power Supply	13-06-1
Circuit Check	13-06-1
Horn Button Switch	13-06-2
Removal & Installation	13-06-1
Specifications	13-06-2

Identification Codes	00-01-1
Description	00-01-1

Alphabetical Index

F

- Fuel Charging and Controls—3.0L** 03-04A-1
 - Adjustments 03-04A-22
 - Air Cleaner 03-04A-22
 - Cleaning & Inspection 03-04A-22
 - Cold Start Injector (CSI) 03-04A-14
 - Components 03-04A-6
 - Description 03-04A-1
 - Fuel Injection Wiring Harness 03-04A-21
 - Fuel Injector Manifold Assembly 03-04A-16
 - Fuel Injectors 03-04A-6
 - Fuel Pressure Regulator 03-04A-7
 - 03-04A-20
 - Fuel Pressure Relief Valve (Schrader Valve) 03-04A-15
 - Fuel Sensor 03-04A-20
 - Idle Air Control (IAC) Valve Assembly 03-04A-14
 - Operation 03-04A-3
 - Removal & Installation 03-04A-8
 - Service Tools 03-04A-23
 - Specifications 03-04A-22
 - Spring Lock Coupling 03-04A-8
 - Throttle Body 03-04A-11
 - Throttle Position (TP) Sensor 03-04A-15
- Fuel Charging and Controls—3.0L/3.2L SHO** .. 03-04B-1
 - Air Intake Manifold 03-04B-2
 - Air Intake Throttle Body 03-04B-8
 - Cleaning & Inspection 03-04B-12
 - Components 03-04B-3
 - Description 03-04B-1
 - Fuel Charging Assembly 03-04B-4
 - Fuel Injection Pulse Dampener 03-04B-12
 - Fuel Injector(s) 03-04B-3
 - 03-04B-11
 - Fuel Pressure Regulator 03-04B-3
 - 03-04B-11
 - Fuel Rail Assembly 03-04B-10
 - Idle Air Control (IAC) Valve Assembly 03-04B-9
 - Intake Manifold & Throttle Body 03-04B-8
 - Operation 03-04B-2
 - Removal & Installation 03-04B-4
 - Service Tools 03-04B-13
 - Specifications 03-04B-13
 - Spring Lock Coupling 03-04B-5
 - Throttle Position Sensor 03-04B-9
- Fuel Charging and Controls—3.8L** 03-04C-1
 - Air Cleaner 03-04C-12
 - Air Intake Manifold 03-04C-4
 - Air Intake Throttle Body 03-04C-10
 - Cleaning and Inspection 03-04C-12
 - Components 03-04C-5
 - Description 03-04C-1
 - Fuel Charging Assembly 03-04C-6
 - Fuel Injection, Electronic 03-04C-14
 - Fuel Injection Supply Manifold Assembly 03-04C-6
 - Fuel Injectors 03-04C-5
 - 03-04C-11
 - Fuel Metering Assembly Identification 03-04C-1
 - Fuel Pressure Regulator 03-04C-5
 - 03-04C-11
 - Fuel Rail Assembly 03-04C-10
 - Idle Air Control (IAC) Valve Assembly 03-04C-10
 - Operation 03-04C-2
 - Removal & Installation 03-04C-6
 - Service Tools 03-04C-13
 - Specifications 03-04C-13
 - Spring Lock Coupling 03-04C-7
 - Throttle Body 03-04C-9
 - Throttle Position (TP) Sensor 03-04C-10
 - Upper Intake Manifold & Throttle Body 03-04C-9
- Fuel Gauge and Low Fuel Warning** 13-03-1
 - Description & Operation 13-03-1
 - Diagnosis & Testing 13-03-4
 - Fuel Gauge 13-03-10
 - Fuel Level Indication System 13-03-1
 - Fuel Pump & Sender Assembly 13-03-8
 - Fuel Sending Unit 13-03-2
 - Low Fuel Warning/Anti-Slosh Module 13-03-4
 - Removal & Installation 13-03-8
 - Service Tools 13-03-10
- Fuel System—Service** 10-00-1
 - Adjustments 10-00-13
 - Air Cleaner 10-00-12
 - Cleaning & Inspection 10-00-12
 - Description 10-00-1
 - Diagnosis 10-00-2
 - Idle Air Control (IAC) Valve 10-00-13
 - Service Tools 10-00-13
 - Specifications 10-00-13
 - Wiring Diagram 10-00-4
- Fuel Tank, Filter and Electric Fuel Pump** 10-01-1
 - Description & Operation 10-01-1

Alphabetical Index

Cleaning	17-01-30	Specifications	00-03-11
Cornering Lamp	17-01-21	Vehicle Emission Control Information Decal	00-03-1
Daytime Running Lamps	17-01-2	Mirrors, Rear View	01-09-1
Diagnosis & Testing	17-01-5	Cleaning	01-09-5
Fog Lamp Assembly	17-01-19	Description	01-09-1
Fog Lamp & Switch	17-01-4	Diagnosis	01-09-1
Headlamp Aim	17-01-30	Frozen Mirrors	01-09-5
Headlamp Assembly	17-01-15	Mirror Assembly, Outside Rear View	01-09-3
Headlamp & Dimmer Switch	17-01-2	Mirror Glass, Power—Replacement	01-09-4
Headlamp Delay System — Autolamp	17-01-3	Mirror, Inside Rear View	01-09-4
	17-01-8	Mirror, Mounting Bracket	01-09-5
Headlamp Switch	17-01-28	Mirror Switch, Power	01-09-4
Headlamp Switch Connector Checkout	17-01-5	Mirrors, Power	01-09-1
Headlamps, Aerodynamic	17-01-1	Removal & Installation	01-09-3
Headlamps ON Warning Chime	17-01-2	Service Tools	01-09-5
High-Mount Stoplamp	17-01-25	Specifications	01-09-5
Potentiometer	17-01-28	Moon Roof, Electric	01-17-1
Removal & Installation	17-01-15	Adjustments	01-17-8
Service Tools	17-01-30	Description & Operation	01-17-1
Specifications	17-01-30	Diagnosis	01-17-2
Stoplamp Switch, Mechanical	17-01-26	Glass & Sunshade	01-17-3
Lighting, Interior	17-02-1	Glass Height	01-17-8
Diagnosis & Testing	17-02-3	Glass Weatherstrip	01-17-5
Illuminated Entry	17-02-2	Halo	01-17-7
	17-02-9	Lifter Arm	01-17-5
Lamp, Cargo	17-02-11	Moon Roof Assembly	01-17-5
Lamp, Dome/Map Combination	17-02-1	Motor	01-17-7
	17-02-7	Removal & Installation	01-17-3
Lamp, Front Door	17-02-11	Service Tools	01-17-11
Lamp Switch, Courtesy/Dome	17-02-10	Specifications	01-17-10
Lamp Switch, Glove Compartment	17-02-10	Switch	01-17-7
Lamp, Transmission Control Selector	17-02-10	Switch Test	01-17-2
Removal & Installation	17-02-7	Water Drainage System & Water Leak	
Specifications	17-02-11	Corrections	01-17-8

M

Maintenance and Lubrication	00-03-1
Chassis Lubrication Points	00-03-11
Description	00-03-1
Engine Lubrication Service Points	00-03-7
General Maintenance Information	00-03-2
Lubrication	00-03-6
Maintenance Schedule & Record Log	00-03-2

N

Noise, Vibration and Harshness	00-04-1
CV Joint Noise & Vibration	00-04-7
Diagnosis & Testing	00-04-7
Diagnostic Theory	00-04-1
Exhaust System Noises	00-04-7
Glossary	00-04-2
NVH Diagnosis	00-04-4

Alphabetical Index

Engine, 3.0L/3.2L SHO	03-01B-1	Flywheel	03-01C-33
Camshaft	03-01B-33	Front Cover Assembly	03-01C-17
Camshaft Seals	03-01B-36	Intermediate Shaft	03-01C-48
Connecting Rod Bearings	03-01B-33	In-Vehicle Service	03-01C-3
Crankshaft/Damper/Front Oil Seal	03-01B-17	Main Bearing Inserts	03-01C-25
Cylinder Heads	03-01B-21	Oil Pan	03-01C-23
	03-01B-43	Oil Pump	03-01C-48
Cylinder Head Cover	03-01B-19	Piston & Connecting Rods	03-01C-29
Description	03-01B-1	Pressure Relief Valve	03-01C-48
Disassembly & Assembly	03-01B-37	Removal & Installation	03-01C-33
Engine Code Information Label	03-01B-2	Rocker Arm Cover	03-01C-12
Engine Dampers	03-01B-8	Service Tools	03-01C-57
Exhaust Manifolds	03-01B-28	Spark Plug Thread Service	03-01C-49
Induction System	03-01B-4	Specifications	03-01C-52
Intake Manifold	03-01B-20	Subassemblies	03-01C-46
Main Bearing Inserts	03-01B-29	Tappet (Roller)	03-01C-11
Oil Pan & Oil Pump	03-01B-26	Upper and Lower Intake Manifolds	03-01C-15
Piston & Connecting Rods	03-01B-24	Water Pump	03-01C-13
	03-01B-41		
Positive Crankcase Ventilation (PCV)	03-04B-5	Evaporative Emissions	03-13-1
Removal & Installation	03-01B-6	Carbon Canister	03-13-4
Sensors	03-01B-27	Description & Operation	03-13-1
Service Tools	03-01B-50	Diagnosis & Testing	03-13-5
Specifications	03-01B-45	Fill Control/Vapor Vent System	03-13-2
Subassemblies	03-01B-41	Flexible Fuel (FF) Evaporative Emission System	03-13-2
Thermostat	03-01B-21	Fuel Tank Evaporative Emission System	03-13-1
Throttle Body	03-01B-9		03-13-5
Timing Belt	03-01B-10	Fuel Tank Vapor Orifice, Pressure Relief & Rollover Valve Assy	03-13-3
Vehicle Emission Control Information (VECI) Label	03-01B-2	Fuel Vapor Emissions Control System	03-13-1
Water Pump	03-01B-19	Pressure & Vacuum Relief System	03-13-4
		Purge Solenoid Valve	03-13-4
Engine, 3.8L	03-01C-1	Removal & Installation	03-13-7
Adjustments	03-01C-50	Service Tools	03-13-12
Balance Shaft & Camshaft Rear Bearing Bore Plug	03-01C-32	Vapor Control Valve	03-13-3
Camshaft	03-01C-28	Vapor Management Valve	03-13-4
Camshaft & Balance Shaft Bearings	03-01C-32		
Connecting Rod Bearings	03-01C-25	Exhaust System	09-00-1
Crankshaft	03-01C-26	Catalytic Converter	09-00-3
Crankshaft Front Oil Seal	03-01C-14	Description	09-00-1
Crankshaft Rear Main Oil Seal	03-01C-23	Exhaust Shields	09-00-2
Cylinder Heads	03-01C-20	General Information	09-00-1
	03-01C-47	Muffler Assembly	09-00-3
Description & Operation	03-01C-1	Removal & Installation	09-00-2
Disassembly & Assembly	03-01C-40	Resonator Assembly	09-00-2
Engine Assembly	03-01C-33	Specifications	09-00-11
Exhaust Manifold, LH	03-01C-3		
Exhaust Manifold, RH	03-01C-4		