

# Alphabetical Index

## A

<b>Accelerator Pedal and Linkage</b> .....	10-02-1
Accelerator Cable Bracket .....	10-02-2
Accelerator Pedal and Shaft Assembly .....	10-02-2
Diagnosis .....	10-02-1
Linkage .....	10-02-1
Removal & Installation .....	10-02-2
Specifications .....	10-02-7
Throttle Cable .....	10-02-3
<b>Air Conditioning System</b> .....	12-03A-1
A/C Plenum Chamber .....	12-03A-49
Adjustments .....	12-03A-72
Ambient Sensor Assy .....	12-03A-26
Blend Door Actuator .....	12-03A-31
Blend Door Actuator, Electric .....	12-03A-7
Blower Motor & Wheel Assy .....	12-03A-46
Blower Speed Controller .....	12-03A-6
Blower Switch .....	12-03A-30
Cold Engine Lock Out Switch (CELO) .....	12-03A-7
Components .....	12-03A-30
Condenser .....	12-03A-62
Constant Control Relay Module (CCRM) .....	12-03A-11
Control Assembly .....	12-03A-4
Defroster Nozzle & Demister Duct/Hoses .....	12-03A-52
Description & Operation .....	12-03A-1
Diagnosis & Testing .....	12-03A-22
Evaporator Case Assy .....	12-03A-33
Evaporator Core .....	12-03A-37
Fixed Orifice Tube .....	12-03A-61
Heater Core .....	12-03A-43
Heater Hoses .....	12-03A-66
Input Sensors .....	12-03A-5
Normal System Operation (Automatic) .....	12-03A-9
Pressure Relief Valve .....	12-03A-9
Recirc Duct Assembly .....	12-03A-46
Refrigerant Lines .....	12-03A-63
Register Ducts .....	12-03A-53
Removal & Installation .....	12-03A-23
Service Tools .....	12-03A-75
Specifications .....	12-03A-74
Spring Lock Coupling .....	12-03A-62
Suction Accumulator/Drier .....	12-03A-58
Sunload Sensor Assembly .....	12-03A-26
System Airflow .....	12-03A-16

Temperature Control .....	12-03A-16
<b>Air Intake System</b> .....	03-12-1
Air Cleaner .....	03-12-2
Air Filter Element—Replacement .....	03-12-1
Air Inlet Resonator .....	03-12-6
Description .....	03-12-1
Mass Air Flow (MAF) Sensor .....	03-12-6
Removal & Installation .....	03-12-1
Specifications .....	03-12-6
<b>Antenna</b> .....	15-02-1
Antenna Cable & Base .....	15-02-2
Antenna with Cable & Mast .....	15-02-2
Antennas, Manual and Power .....	15-02-2
Automatic Power Antenna Module .....	15-02-5
Diagnosis & Testing .....	15-02-1
Mast, Power .....	15-02-5
Removal & Installation .....	15-02-2
Specifications .....	15-02-5
<b>Audio Systems—Service</b> .....	15-00-1
Description and Operation .....	15-00-1
Diagnosis and Testing .....	15-00-3
Radio .....	15-00-1
Service Tools .....	15-00-27

## B

<b>Battery</b> .....	14-01-1
Adding Water .....	14-01-9
Battery Charging .....	14-01-4
Battery Cleaning .....	14-01-8
Battery Drain Test .....	14-01-3
Battery Tray .....	14-01-7
Cleaning and Inspection .....	14-01-8
Maintenance .....	14-01-8
Removal and Installation .....	14-01-5
Service Tools .....	14-01-9
Specifications .....	14-01-9
Testing .....	14-01-1
<b>Battery and Charging System—Service</b> .....	14-00-1
Adjustments .....	14-00-4
Battery Check .....	14-00-3
Charging System Test .....	14-00-3
Description & Operation .....	14-00-1
Diagnosis .....	14-00-2
Fuse Link .....	14-00-2