

Alphabetical Index

Service Tools	06-05-8	Description	06-04-1
Specifications	06-05-8	Overhaul	06-04-11
Vacuum Release Parking Brake	06-05-3	Removal & Installation	06-04-5
Brake System, Power	06-07-1	Rotor	06-04-8
Adjustments	06-07-4	Rotor Refinishing	06-04-13
Brake Booster-to-Master Cylinder Push Rod ...	06-07-4	Rotor Splash Shield	06-04-9
Brake Booster, Vacuum	06-07-1	Service Tools	06-04-14
Description	06-07-1	Specifications	06-04-13
Diagnosis & Testing	06-07-1	Brakes, Rear Drum	06-02-1
Removal & Installation	06-07-1	Adjustments	06-02-9
Specifications	06-07-5	Bearing Hub Unit Assembly	06-02-3
Brake System—Service	06-00-1	Brake Backing Plate	06-02-7
Brake Hose	06-00-15	Brake Drum Refinishing	06-02-7
Brake Pedal Free Height Measurements	06-00-3	Brake Drums	06-02-3
Brake Pedal Travel Measurement	06-00-3	Brake Shoe Relining	06-02-8
Brake Tubing	06-00-14	Brake Shoes	06-02-4
Cleaning & Inspection	06-00-13	Cleaning & Inspection	06-02-7
Description	06-00-1	Removal & Installation	06-02-3
Diagnosis & Testing	06-00-2	Service Tools	06-02-10
Disc Brakes	06-00-14	Specifications	06-02-10
Drum Brakes	06-00-14	Wheel Cylinder	06-02-6
Hydraulic System	06-00-2	Bumpers	01-19-1
Master Cylinder	06-00-2	Bumper Cover	01-19-10
Power Brake Functional Test	06-00-4	Bumper, Front & Rear	01-19-6
Service Precautions	06-00-13	Bumper Isolator & Bracket	01-19-10
Service Tools	06-00-16	Bumper Stone Deflector	01-19-10
Specifications	06-00-16	Bumper Cover	01-19-11
Brakes, Front Disc	06-03-1	Removal & Installation	01-19-1
Brake Lining	06-03-4	Repair	01-19-11
Brake Rotor	06-03-5	Specifications	01-19-13
Caliper Assembly	06-03-3		
Description	06-03-1		
Overhaul	06-03-6		
Removal & Installation	06-03-3		
Rotor Service	06-03-8		
Rotor Splash Shield	06-03-5		
Service Precautions	06-03-3		
Service Tools	06-03-10		
Specifications	06-03-10		
Brakes, Rear Disc	06-04-1		
Anchor Plate	06-04-4		
	06-04-9		
Brake Adapter	06-04-4		
	06-04-11		
Brake Shoe & Lining	06-04-7		
Caliper Assembly	06-04-4		
	06-04-5		
	06-04-11		
		Charging System Gauge/Warning Indicator	13-04-1
		Bulb, Indicator	13-04-2
		Description & Operation	13-04-1
		Diagnosis & Testing	13-04-1
		Removal & Installation	13-04-2
		Climate Control System—Service	12-00-1
		Adding Refrigerant Oil	12-00-63
		Basic Principles	12-00-2
		Checking for Leaks	12-00-20
		Clutch Cycling Pressure Switch	12-00-10
		Compressor & Magnetic Clutch Assembly	12-00-7
		Compressor Clutch Circuit	12-00-37

C