

Alphabetical Index

Condenser	12-00-7
Description & Operation	12-00-4
Diagnosis & Testing	12-00-12
Evaporator Core	12-00-9
Fixed Orifice Tube	12-00-9
General Information	12-00-3
Heater Core Leak Test	12-00-51
Refrigerant Recovery	12-00-59
Refrigerant System Service	12-00-56
Refrigerant Systems	12-00-6
	12-00-15
Refrigerant-134a (R-134a) Systems	12-00-56
Refrigerant-12 (R-12) System	12-00-56
Safety Precautions	12-00-3
Service Gauge Port Valves	12-00-10
Service Precautions	12-00-3
Service Tools	12-00-64
Specifications	12-00-64
Spring Lock Coupling	12-00-7
Suction Accumulator/Drier	12-00-9
Vacuum System	12-00-13
Clock	13-07-1
Description & Operation	13-07-1
Diagnosis & Testing	13-07-1
Removal & Installation	13-07-3
Setting Time	13-07-1
Clutch Controls	08-02-1
Clutch Cable Assembly	08-02-7
Clutch Control System, Self-Adjusting	08-02-1
Clutch Pedal Quadrant & Pawl Assembly	08-02-4
Description & Operation	08-02-1
Diagnosis	08-02-3
Removal & Installation	08-02-4
Specifications	08-02-9
Starter/Clutch Interlock Switch	08-02-2
	08-02-8
Testing	08-02-2
Clutch/Pressure Plate	08-01-1
Clutch Disc and Pressure Plate	08-01-4
Description & Operation	08-01-1
Release Bearing	08-01-2
Release Fork & Lever	08-01-3
Removal & Installation	08-01-2
Service Tools	08-01-4
Specifications	08-01-4
Clutch System—Service	08-00-1
Clutch Disc	08-00-4

Clutch Release Bearing	08-00-4
Description	08-00-1
Diagnosis	08-00-1
Dowels, Engine	08-00-3
Pressure Plate and Cover	08-00-5
Removal & Installation	08-00-3
Compressor and Clutch—FX-15	12-03C-1
Clutch Field Coil	12-03C-6
Clutch Hub & Pulley	12-03C-4
Compressor External Leak Test	12-03C-2
Compressor Manifold Leak Test	12-03C-2
Compressor Rotating Torque Check	12-03C-3
Description & Operation	12-03C-1
Diagnosis & Testing	12-03C-2
Maintenance	12-03C-10
Manifold & Hose Assembly	12-03C-4
Removal & Installation	12-03C-3
Service Tools	12-03C-11
Shaft Seal	12-03C-7
Specifications	12-03C-11
Compressor and Clutch—10P15F	12-03B-1
Clutch Field Coil	12-03B-6
Clutch Hub & Pulley	12-03B-4
Clutch Pulley Bearing	12-03B-6
Compressor—Out of Vehicle	12-03B-10
Description & Operation	12-03B-1
Maintenance	12-03B-2
Major Service Operations	12-03B-10
Removal & Installation	12-03B-3
Service Tools	12-03B-16
Shaft Seal & Seat	12-03B-6
Specifications	12-03B-15
Suction or Discharge Manifold	12-03B-3
Testing	12-03B-2

D

Distributor Ignition (DI)	03-07A-1
Cleaning & Inspection	03-07A-13
Description	03-07A-1
Distributor Assembly	03-07A-4
Distributor Cap	03-07A-3
Distributor Rotor	03-07A-3
Ignition Control Module (ICM)	03-07A-9
Operation	03-07A-1