

# Alphabetical Index

Removal & Installation .....	02-03-1	Main & Connecting Rod Bearings .....	03-00-16
Service Tools .....	02-03-9	Oil Pan .....	03-00-23
Specifications .....	02-03-8	Oil Pump .....	03-00-22
Transaxle Hydramount Assembly, LH .....	02-03-7	Overhaul .....	03-00-13
<b>Engine Cooling</b> .....	03-03-1	Pistons, Pins & Rings .....	03-00-18
Cleaning .....	03-03-32	Push Rods .....	03-00-29
Cooling Fan .....	03-03-6	Service Tools .....	03-00-30
Cooling System Pressure Test .....	03-03-10	Tappets, Hydraulic .....	03-00-21
Description & Operation .....	03-03-1	Valve Clearance .....	03-00-11
Diagnosis & Testing .....	03-03-9	Valve Rocker Arm .....	03-00-29
Draincock Replacement .....	03-03-31	Valves, Refacing .....	03-00-27
Fan, Motor and Constant Control Relay		<b>Engine, 3.0L/3.0L FF</b> .....	03-01A-1
Module (CCRM) .....	03-03-16	Camshaft .....	03-01A-46
Inspection .....	03-03-33	Camshaft Bearings .....	03-01A-50
Oil Cooler Transfer or Replacement .....	03-03-30	Connecting Rod Bearings .....	03-01A-36
Radiator .....	03-03-10	Crankshaft .....	03-01A-44
Radiator Core .....	03-03-32	Crankshaft Pulley/Damper/Front Oil Seal .....	03-01A-6
Radiator Hose .....	03-03-27	Crankshaft Rear Oil Seal .....	03-01A-2
Radiator Pressure Cap .....	03-03-33	Cylinder Heads .....	03-01A-17
Radiator Tank .....	03-03-28	03-01A-63	
Removal & Installation .....	03-03-10	Description & Operation .....	03-01A-1
Service Procedures .....	03-03-32	Disassembly & Assembly .....	03-01A-51
Service Tools .....	03-03-37	EGR Valve, Tube & Fitting/Orifice .....	03-01A-30
Specifications .....	03-03-36	Emission Calibration Label .....	03-01A-2
Testing .....	03-03-10	Engine Assembly .....	03-01A-38
Thermostat .....	03-03-9	Engine Identification .....	03-01A-1
03-03-20		Engine Lifting/Support Points .....	03-01A-38
Water Pump .....	03-03-22	Exhaust Manifold, LH/RH .....	03-01A-33
Water Pump Inlet Tube Assembly .....	03-03-28	Flywheel .....	03-01A-43
<b>Engine—Service</b> .....	03-00-1	Front Cover .....	03-01A-8
Adjustments .....	03-00-11	Inspection .....	03-01A-63
Camshaft .....	03-00-21	Intake Manifold .....	03-01A-14
Camshaft End Play .....	03-00-9	In-Vehicle Service .....	03-01A-2
Camshaft Lobe Lift .....	03-00-8	Main Bearing Inserts .....	03-01A-34
Connecting Rods .....	03-00-20	Oil Pan & Oil Pump .....	03-01A-25
Core Plugs .....	03-00-15	Pistons & Connecting Rods .....	03-01A-24
Crankshaft .....	03-00-17	03-01A-61	
Crankshaft End Play .....	03-00-10	Removal & Installation .....	03-01A-38
Cylinder Block .....	03-00-13	Rocker Arm Cover .....	03-01A-12
Cylinder Heads .....	03-00-23	Sensors .....	03-01A-27
Diagnosis & Testing .....	03-00-3	Service Tools .....	03-01A-68
Engine Identification .....	03-00-2	Specifications .....	03-01A-65
Engine Oil Leaks .....	03-00-3	Subassemblies .....	03-01A-61
Exhaust Emission Control System .....	03-00-2	Tappet .....	03-01A-22
Exhaust Manifolds .....	03-00-30	Thermostat .....	03-01A-16
Flywheel .....	03-00-30	Throttle Body .....	03-01A-3
Hydraulic Tappet/Lash Adjuster .....	03-00-8	Timing Chain .....	03-01A-32
Intake Manifolds .....	03-00-30	Water Pump .....	03-01A-10