

# Alphabetical Index

Testing .....	11-00-2
<b>Subframe</b> .....	02-01-1
Removal & Installation .....	02-01-1
Service Tools .....	02-01-3
Specifications .....	02-01-3
<b>Suspension and Wheel Ends, Front</b> .....	04-01-1
Adjustments .....	04-01-17
Component Replacement .....	04-01-2
Components .....	04-01-2
Control Arm, Lower .....	04-01-6
Control Arm-to-Tension Strut Insulator, Lower .....	04-01-7
Description .....	04-01-1
Hub & Wheel Bearings .....	04-01-9
Inner Pivot Bushing .....	04-01-6
Removal & Installation .....	04-01-6
Service Tools .....	04-01-18
Shock Absorber Strut, Spring, Bearing and Seat Assembly and Upper Mount .....	04-01-12
Specifications .....	04-01-17
Stabilizer Bar/Link Assembly and/or Insulators .....	04-01-8
Steering Knuckle .....	04-01-16
Suspension Fasteners .....	04-01-3
Tension Strut-to-Subframe Insulators .....	04-01-8
Wheel Assembly .....	04-01-5
Wheel Bearings .....	04-01-17
<b>Suspension and Wheel Ends, Rear</b> .....	04-02-1
Anti-Lock Sensor Ring .....	04-02-30
Bearing & Hub Assembly, Disc Brakes .....	04-02-29
Bearing & Hub Assembly, Drum Brakes .....	04-02-29
Component Replacement .....	04-02-4
Components .....	04-02-3
Control Arm .....	04-02-28
Description & Operation .....	04-02-1
Removal & Installation .....	04-02-12
Service Tools .....	04-02-32
Shock Absorber .....	04-02-12
Specifications .....	04-02-31
Springs .....	04-02-25
Stabilizer Bar, Insulators and Link Assembly .....	04-02-16
Suspension Arm, Lower .....	04-02-21
Suspension Arms, Upper .....	04-02-19
Tension Strut .....	04-02-21
Wheel Assembly .....	04-02-8
<b>Suspension—Service</b> .....	04-00-1
Adjustments .....	04-00-3

Ball Joint, Lower .....	04-00-2
Camber, Rear .....	04-00-7
Caster & Camber, Front .....	04-00-5
Service Tools .....	04-00-11
Shock Absorber Checks .....	04-00-2
Specifications .....	04-00-9
Steering Pull/Drift .....	04-00-7
Suspension, Front .....	04-00-1
Suspension, Rear .....	04-00-2
Toe, Front .....	04-00-6
Toe, Rear .....	04-00-9
Wheel Alignment, Rear .....	04-00-9
Wheel Turning Angle, Front .....	04-00-7

## T

<b>Tachometer, Oil Pressure, Coolant Temperature Gauges/Warning Indicators</b> .....	13-05-1
Coolant Temperature Sending Unit .....	13-05-8
Description & Operation .....	13-05-1
Diagnosis & Testing .....	13-05-3
Engine Oil Pressure .....	13-05-3
Indicator Bulb .....	13-05-8
Magnetic Temperature Gauge .....	13-05-2
Oil Pressure Indicator .....	13-05-2
Removal & Installation .....	13-05-6
Service Tools .....	13-05-9
Specifications .....	13-05-8
Tachometer .....	13-05-1
.....	13-05-6
<b>Transaxle, Automatic—AXODE</b> .....	07-01-1
Air Pressure Checks .....	07-01-85
Cleaning & Inspection .....	07-01-184
Control Pressure Test .....	07-01-52
Converter Leakage Check .....	07-01-84
Description & Operation .....	07-01-2
Diagnosis & Testing .....	07-01-28
Diagnostic Hydraulic/Mechanical Chart Instructions .....	07-01-28
Disassembly & Assembly .....	07-01-96
Downshifts .....	07-01-15
Exploded View .....	07-01-16
.....	07-01-17
Fluid Leakage in Converter Area .....	07-01-83
Identification Tag .....	07-01-15
Installation .....	07-01-182