

Alphabetical Index

Main Components & Functions	07-01-3	Shift Control Cable Assembly	07-05-5
Oil Pump & Main Control Assembly	07-01-182	Shift Knob	07-05-3
On-Board Diagnostic Quick Tests	07-01-53	Shift Lever & Housing Assembly	07-05-5
Parts Cross-Reference	07-01-189	Specifications	07-05-9
Preliminary Testing & Diagnosis	07-01-61	Transaxle, Manual—MTX IV	07-03-1
Removal	07-01-88	Bearing Cups	07-03-53
Removing the Transmission Tester & Clearing		Cleaning & Inspection	07-03-50
DTC's	07-01-63	Clutch Housing	07-03-39
Service Tools	07-01-187	Description	07-03-1
Shift Point Road Test	07-01-81	Diagnosis	07-03-11
Specifications	07-01-186	Differential	07-03-47
Speedometer Drive Assembly	07-01-185	Disassembly & Assembly	07-03-31
Stall Test	07-01-85	Exploded View	07-03-3
Subassemblies	07-01-113	Fifth Gear Shaft Assembly	07-03-37
Torque Converter End Play Check	07-01-87	Fifth Gear Shift Control	07-03-44
Torque Converter Reactor One-Way Clutch		Flywheel	07-03-30
Check	07-01-86		07-03-51
Transaxle	07-01-89	Flywheel Ring Gear	07-03-30
	07-01-183	Gearset	07-03-20
	07-01-184	Input Cluster Shaft Bearings	07-03-52
Transaxle Assembly	07-01-160	Input Cluster Shaft Seal Assembly	07-03-52
Transaxle Disassembly	07-01-96	Main Shaft Assembly	07-03-31
Transaxle Fluid Condition Check	07-01-82		07-03-34
Transaxle Fluid Cooler Flow Test	07-01-84	Main Shift Control Shaft	07-03-42
Transaxle Fluid Drain & Refill	07-01-88	Major Service Operations	07-03-52
Transaxle Fluid Leakage Checks	07-01-82	Power Flow	07-03-8
Transaxle Fluid Level Check	07-01-81	Removal & Installation	07-03-16
Transaxle, Automatic—Cooling	07-02-1	Reverse Shift Relay Lever & Bracket	07-03-45
Diagnosis & Testing	07-02-1	Selector Control Plate	07-03-45
Oil Cooler Steel Lines	07-02-1	Service Tools	07-03-63
Service Procedures	07-02-1	Shift Controls	07-03-8
Service Tools	07-02-3	Shift Knob, Boot & Control Assembly	07-03-56
Specifications	07-02-3	Specifications	07-03-62
Transaxle, Automatic—External Controls	07-05-1	Speedometer Driven Gear	07-03-55
Adjustments	07-05-8	Synchronizer	07-03-33
Bezel Assembly	07-05-4	Transaxle Noise	07-03-11
Brake-Shift Interlock	07-05-1	Trim, Exterior	01-08-1
Column Shift	07-05-8	Body Side Protection & Bumper Rubstrip	
Description & Operation	07-05-1	Mouldings	01-08-1
Diagnosis	07-05-2	Mouldings, Exterior	01-08-2
Floor Shift	07-05-3	Removal & Installation	01-08-1
	07-05-8	Roof Luggage Carrier	01-08-2
Indicator Bulb	07-05-5	Specifications	01-08-6
Interlock Cable Assembly	07-05-6	Trim, Interior	01-05-1
Manual Linkage	07-05-8	Auxiliary Visor Assembly	01-05-18
Overdrive Lockout	07-05-2	Carpets & Floor Mats	01-05-21
PRNDL Cable Adjustment	07-05-8	Description	01-05-1
Removal & Installation	07-05-3	End Cap Replacement, Roll-Up Type	01-05-25