

# Alphabetical Index

Bench Tests .....	03-06-6	Switch, Ignition .....	11-05-1
Description and Operation .....	03-06-1		11-05-06
Diagnosis & Testing .....	03-06-3	Switch, Multi-Function .....	11-05-2
Disassembly & Assembly .....	03-06-7		11-05-6
Exploded View .....	03-06-8	Turn Signal Switching .....	11-05-2
Jump Starting .....	03-06-2	Windshield Washer Switching .....	11-05-2
Removal & Installation .....	03-06-7	Windshield Wiper Switching .....	11-05-2
Road Service .....	03-06-2		
Service Tools .....	03-06-12	<b>Steering System, Power</b> .....	11-02-1
Specifications .....	03-06-11	Adjustments .....	11-02-68
Starter Drive Replacement .....	03-06-9	Atsugi Steering Pump .....	11-02-10
Starter Load Test .....	03-06-4	Cleaning & Inspection .....	11-02-67
Starter Motor .....	03-06-7	Description .....	11-02-1
Starter Motor Brushes Replacement .....	03-06-9	Diagnosis & Testing .....	11-02-12
Exploded View .....	03-06-8	Disassembly & Assembly .....	11-02-44
		External Leakage .....	11-02-14
<b>Steering Column</b> .....	11-04-1	Gear Housing, Rack Yoke Plug, Rack Assembly, Rack Bushing & Oil Seals .....	11-02-55
Adjustments .....	11-04-27	Input Shaft & Valve Assembly .....	11-02-48
Brake Shift Interlock Solenoid .....	11-04-14	Operation .....	11-02-11
Contact Assembly .....	11-04-9	Power Steering Pump .....	11-02-28
Description .....	11-04-1	Pressure & Return Line Fitting .....	11-02-39
Diagnosis & Testing .....	11-04-6		11-02-46
Disassembly & Assembly .....	11-04-17		11-02-60
Exploded View .....	11-04-2	Pressure & Return Lines .....	11-02-34
Gear Shift Lever, Cover and/or Shift Lever Clip .....	11-04-12	Pump Reservoir .....	11-02-41
Ignition Lock Cylinder .....	11-04-13	Remote Reservoir .....	11-02-28
Ignition Lock Cylinder Assembly .....	11-04-9	Removal & Installation .....	11-02-28
Removal & Installation .....	11-04-8	Rotary Valve .....	11-02-11
Service Tools .....	11-04-28	Service Tools .....	11-02-72
Shaft Bearing, Intermediate .....	11-04-15	Specifications .....	11-02-71
Shaft Bearing, Lower .....	11-04-16	Steering Gear .....	11-02-1
Shaft Bearing, Upper .....	11-04-14		11-02-29
Specifications .....	11-04-27		11-02-46
Steering Shaft, Intermediate .....	11-04-12	Steering Pump .....	11-02-61
Steering Wheel .....	11-04-8	Tie Rod End Replacement .....	11-02-28
Tilt Lock Lever .....	11-04-8	VAPS Module .....	11-02-43
		Variable Assist Power Steering (VAPS) .....	11-02-5
<b>Steering Column Switches</b> .....	11-05-1	<b>Steering System—Service</b> .....	11-00-1
Cornering Lamp Switching .....	11-05-2	Cleaning & Inspection .....	11-00-15
Description & Operation .....	11-05-1	Description .....	11-00-1
Diagnosis & Testing .....	11-05-3	Diagnosis .....	11-00-6
Flasher Unit .....	11-05-7	Power Steering Pump Model Identification .....	11-00-1
Hazard Flashing Switching .....	11-05-2	Preliminary Tests .....	11-00-2
Headlamp Dimmer/Flash-to-Pass Switching .....	11-05-2	Pump Flow & Pressure Test .....	11-00-2
Removal & Installation .....	11-05-6	Purging Power Steering System of Air .....	11-00-5
Service Tools .....	11-05-8	Service Tools .....	11-00-13
Specifications .....	11-05-8	Specifications .....	11-00-13
Switch, Blade-Type .....	11-05-1		