

# Alphabetical Index

- Back Trim Cover, Front Seat ..... 01-10B-3
- Cushion, Front Seat ..... 01-10B-7
- Description ..... 01-10B-1
- Diagnosis ..... 01-10B-2
- Lumbar & Bolster Support ..... 01-10B-1
- Lumbar Support Pad ..... 01-10B-8
- Operation ..... 01-10B-1
- Removal & Installation ..... 01-10B-3
- Specifications ..... 01-10B-9
- Seats and Tracks** ..... 01-10A-1
  - Adjustments ..... 01-10A-32
  - Diagnosis ..... 01-10A-4
  - Head Restraint, Front Seat ..... 01-10A-22
  - Head Restraints ..... 01-10A-2
  - Power Seat ..... 01-10A-3
  - Recliner, Manual ..... 01-10A-2
  - Removal & Installation ..... 01-10A-6
  - Seat Back, Front ..... 01-10A-22
  - Seat Back Latch, Rear — Wagon ..... 01-10A-17
  - Seat Back Trim Cover, Front ..... 01-10A-25
  - Seat Back Trim Cover, Rear ..... 01-10A-29
  - Seat Control Switch ..... 01-10A-13
  - Seat Cushion, Rear ..... 01-10A-13
  - Seat Cushion Trim Cover, Front ..... 01-10A-26
  - Seat, Rear — Center Armrest Cover ..... 01-10A-31
  - Seat, 6-Way Power ..... 01-10A-1
  - Seat Track, Manual ..... 01-10A-1
  - Seat Track, 6-Way Power ..... 01-10A-7
  - Seats—Bucket and Split Bench, Manual ..... 01-10A-6
  - Service Tools ..... 01-10A-33
  - Specifications ..... 01-10A-32
  - Testing ..... 01-10A-3
  - Wagon Second Seats ..... 01-10A-2
- Speakers** ..... 15-03-1
  - Description ..... 15-03-1
  - Diagnosis & Testing ..... 15-03-1
  - Package Tray Mount ..... 15-03-5
  - Poor Sound Quality ..... 15-03-3
  - Speakers, Door Mounted ..... 15-03-4
  - Speakers, Rear ..... 15-03-4
- Speed Control System — 3.0L MFI, 3.0L SHO, 3.8L** ..... 10-03A-1
  - Actuator Cable ..... 10-03A-37
  - Adjustments ..... 10-03A-44
  - Check Valve ..... 10-03A-42
  - Clockspring Assembly ..... 10-03A-40
  - Clutch Switch ..... 10-03A-41
  - Control Switches ..... 10-03A-39
  - Control Switches Test ..... 10-03A-4
  - Description ..... 10-03A-1
  - Diagnosis & Testing ..... 10-03A-3
  - Linkage Actuator Cable ..... 10-03A-44
  - Operation ..... 10-03A-3
  - Pinpoint Tests ..... 10-03A-21
  - Removal & Installation ..... 10-03A-34
  - Service Tools ..... 10-03A-46
  - Specifications ..... 10-03A-45
  - Speed Control Amplifier Assembly ..... 10-03A-38
  - Speed Control Metering (Dump) Valve ..... 10-03A-3
  - Speed Control Servo Assembly ..... 10-03A-34
  - Speed Control Tester ..... 10-03A-9
  - Vacuum Reservoir ..... 10-03A-41
  - VSS ..... 10-03A-38
  - VSS Test ..... 10-03A-7
- Speed Control System — 3.2L SHO** ..... 10-03B-1
  - Actuator Cable ..... 10-03B-10
  - Adjustments ..... 10-03B-14
  - Clockspring Assembly ..... 10-03B-13
  - Control Switches ..... 10-03B-12
  - Deactivator Switch ..... 10-03B-1
  - Description ..... 10-03B-1
  - Diagnosis & Testing ..... 10-03B-2
  - Operation ..... 10-03B-2
  - Removal & Installation ..... 10-03B-9
  - Service Tools ..... 10-03B-16
  - Servo and Bracket Assembly ..... 10-03B-9
  - Specifications ..... 10-03B-15
  - System Activation ..... 10-03B-2
  - Vehicle Speed Sensor ..... 10-03B-1
- Speedometer/Odometer** ..... 13-02-1
  - Description & Operation ..... 13-02-1
  - Diagnosis & Testing ..... 13-02-1
  - Major Service Operations ..... 13-02-5
  - Removal & Installation ..... 13-02-3
  - Specifications ..... 13-02-5
  - Speedometer Assembly ..... 13-02-3
  - Speedometer Cables ..... 13-02-3
  - Vehicle Speed Sensor (VSS) ..... 13-02-3
- Starting System—Gear Reduced Permanent Magnet** ..... 03-06-1
  - Armature Replacement ..... 03-06-10