

Alphabetical Index

H

Halfshafts, Front Drive	05-04-1
CV Joint Boot Indentation	05-04-8
Description	05-04-1
Diagnosis	05-04-8
Disassembly & Assembly	05-04-15
Halfshaft Assembly	05-04-9
Inboard CV Joint	05-04-24
Inspection	05-04-8
Link Shaft/Halfshaft — SHO Manual	05-04-34
Operation	05-04-7
Outboard CV Joint & Boot	05-04-15
Outboard CV Joints Dust Seal	05-04-22
Removal & Installation	05-04-9
Service Tools	05-04-37
Specifications	05-04-36
Speed Indicator Ring	05-04-23
Wheel & Tire Balancing, Front	05-04-7
Handles, Locks, Latches and Mechanisms	01-14A-1
Adjustments	01-14A-18
Child Safety Lock	01-14A-2
Diagnosis & Testing	01-14A-2
Door Latch Bellcrank, Rear	01-14A-9
Door Latch, Front	01-14A-5
Door Latch, Rear	01-14A-7
Door Latch Remote Control, Front or Rear	01-14A-9
Door Lock Cylinder	01-14A-9
Door Lock Switch, Power	01-14A-4
Door Locks, Power	01-14A-1
Door Outside Handle	01-14A-9
Door Striker	01-14A-10
Glove Compartment Latch & Lock	01-14A-18
Hood Latch	01-14A-12
Hood Latch Control Cable	01-14A-11
Latch and Cable, Fuel Filler Door Remote	01-14A-10
Latch & Lock, Luggage Compartment Deck	
Lid	01-14A-13
Latch & Striker, Liftgate	01-14A-14
Latch Striker Assembly, Luggage Compartment	
Deck Lid	01-14A-13
Lock Cylinder	01-14A-16
Lubrication	01-14A-19
Luggage Compartment Remote Control	
Cable & Latch	01-14A-17
Motor	01-14A-2
Remote Luggage Compartment Release	01-14A-16

Removal & Installation	01-14A-4
Service Tools	01-14A-20
Specifications	01-14A-19
Striker Anchor Plate	01-14A-16
Support Cylinder, Liftgate	01-14A-14
Heating and Defrosting	12-02-1
Adjustments	12-02-24
Air Inlet Duct & Blower Housing Assembly	12-02-21
Airflow	12-02-1
Airflow Schematic	12-02-2
Blower Motor & Wheel Assembly	12-02-13
Blower Motor Resistor	12-02-14
Blower Switch	12-02-10
Components	12-02-6
Control Assembly	12-02-3
Description	12-02-6
Removal & Installation	12-02-9
Defroster Nozzle	12-02-17
Demisters & Demister Hoses	12-02-18
Description & Operation	12-02-1
Floor Air Distribution Duct	12-02-19
Floor Heater System	12-02-19
Floor-Panel Door Vacuum Motor	12-02-21
Heater Case Assembly	12-02-10
Heater Core	12-02-9
Description	12-02-12
Heater Hoses	12-02-22
Outside-Recirc Door Vacuum Motor	12-02-14
Panel-Defrost Door Vacuum Motor	12-02-21
Plenum Chamber & Duct Assembly	12-02-15
Recirc Duct Assembly	12-02-13
Removal & Inspection	12-02-9
Safety Precautions	12-02-6
Service Tools	12-02-25
Specifications	12-02-24
Temperature Control	12-02-4
Vacuum Selector Switch	12-02-10
Horn	13-06-1
Backup Power Supply	13-06-1
Circuit Check	13-06-1
Horn Button Switch	13-06-2
Removal & Installation	13-06-1
Specifications	13-06-2

Identification Codes	00-01-1
Description	00-01-1