

# Alphabetical Index

## F

<b>Fuel Charging and Controls—3.0L</b> .....	03-04A-1	<b>Fuel Charging and Controls—3.8L</b> .....	03-04C-1
Adjustments .....	03-04A-22	Air Cleaner .....	03-04C-12
Air Cleaner .....	03-04A-22	Air Intake Manifold .....	03-04C-4
Cleaning & Inspection .....	03-04A-22	Air Intake Throttle Body .....	03-04C-10
Cold Start Injector (CSI) .....	03-04A-14	Cleaning and Inspection .....	03-04C-12
Components .....	03-04A-6	Components .....	03-04C-5
Description .....	03-04A-1	Description .....	03-04C-1
Fuel Injection Wiring Harness .....	03-04A-21	Fuel Charging Assembly .....	03-04C-6
Fuel Injector Manifold Assembly .....	03-04A-16	Fuel Injection, Electronic .....	03-04C-14
Fuel Injectors .....	03-04A-6	Fuel Injection Supply Manifold Assembly .....	03-04C-6
Fuel Pressure Regulator .....	03-04A-7	Fuel Injectors .....	03-04C-5
	03-04A-20		03-04C-11
Fuel Pressure Relief Valve (Schrader		Fuel Metering Assembly Identification .....	03-04C-1
Valve) .....	03-04A-15	Fuel Pressure Regulator .....	03-04C-5
Fuel Sensor .....	03-04A-20		03-04C-11
Idle Air Control (IAC) Valve Assembly .....	03-04A-14	Fuel Rail Assembly .....	03-04C-10
Operation .....	03-04A-3	Idle Air Control (IAC) Valve Assembly .....	03-04C-10
Removal & Installation .....	03-04A-8	Operation .....	03-04C-2
Service Tools .....	03-04A-23	Removal & Installation .....	03-04C-6
Specifications .....	03-04A-22	Service Tools .....	03-04C-13
Spring Lock Coupling .....	03-04A-8	Specifications .....	03-04C-13
Throttle Body .....	03-04A-11	Spring Lock Coupling .....	03-04C-7
Throttle Position (TP) Sensor .....	03-04A-15	Throttle Body .....	03-04C-9
		Throttle Position (TP) Sensor .....	03-04C-10
		Upper Intake Manifold & Throttle Body .....	03-04C-9
<b>Fuel Charging and Controls—3.0L/3.2L SHO</b> ..	03-04B-1	<b>Fuel Gauge and Low Fuel Warning</b> .....	13-03-1
Air Intake Manifold .....	03-04B-2	Description & Operation .....	13-03-1
Air Intake Throttle Body .....	03-04B-8	Diagnosis & Testing .....	13-03-4
Cleaning & Inspection .....	03-04B-12	Fuel Gauge .....	13-03-10
Components .....	03-04B-3	Fuel Level Indication System .....	13-03-1
Description .....	03-04B-1	Fuel Pump & Sender Assembly .....	13-03-8
Fuel Charging Assembly .....	03-04B-4	Fuel Sending Unit .....	13-03-2
Fuel Injection Pulse Dampener .....	03-04B-12	Low Fuel Warning/Anti-Slosh Module .....	13-03-4
Fuel Injector(s) .....	03-04B-3	Removal & Installation .....	13-03-8
	03-04B-11	Service Tools .....	13-03-10
Fuel Pressure Regulator .....	03-04B-3	<b>Fuel System—Service</b> .....	10-00-1
	03-04B-11	Adjustments .....	10-00-13
Fuel Rail Assembly .....	03-04B-10	Air Cleaner .....	10-00-12
Idle Air Control (IAC) Valve Assembly .....	03-04B-9	Cleaning & Inspection .....	10-00-12
Intake Manifold & Throttle Body .....	03-04B-8	Description .....	10-00-1
Operation .....	03-04B-2	Diagnosis .....	10-00-2
Removal & Installation .....	03-04B-4	Idle Air Control (IAC) Valve .....	10-00-13
Service Tools .....	03-04B-13	Service Tools .....	10-00-13
Specifications .....	03-04B-13	Specifications .....	10-00-13
Spring Lock Coupling .....	03-04B-5	Wiring Diagram .....	10-00-4
Throttle Position Sensor .....	03-04B-9	<b>Fuel Tank, Filter and Electric Fuel Pump</b> .....	10-01-1
		Description & Operation .....	10-01-1