

- 1. Bolt (2 reg'd) 2. Clutch assist lever 3. Felt washer
- 4. Bolt
- 5. Clutch release lever stud
- 6. Clutch release hub and bearing 7. Clutch disc
- 8. Flywheel-to-clutch pressure plate dowel (3 req'd)
- 9. Rear of engine 10. Flywheel housing to block
- dowel (2 reg'd) 11. Bolt (3 reg'd)

12. Clutch release lever bushing

- 14. Clutch pressure plate 15. Clutch release lever
- 16. Transaxle assy 17. Transmission energy bracket
- 18. Clutch assist shaft bushing
- 19. Bolt 20. Stud (2 req'd)
- A. Tighten to 35-50 N.m (26-37 lb-ft) B. Tighten to 40-55 N.m (30-40 lb-ft) C. Tighten to 33 N.m (24 lb-ft)
- D. Tighten to 46-63 N.m (34-46 lb-ft) E. Tighten to 54-92 N.m (40-68 lb-ft)