TROUBLESHOOTING INDEX 11-2

SECTION 1: ENGINE 11-2

SECTION 2: DRIVE TRAIN 11-3

SECTION 3: BRAKE SYSTEM 11-4

SECTION 4: WHEELS, TIRES, STEERING

AND SUSPENSION 11-4

SECTION 5: ELECTRICAL

ACCESSORIES 11-5

SECTION 6: INSTRUMENTS AND

GAUGES 11-6

SECTION 7: CLIMATE CONTROL 11-6

DIAGNOSTIC PROCEDURES 11-7

SECTION 1: ENGINE 11-7

ENGINE STARTING PROBLEMS 11-7

ENGINE RUNNING CONDITIONS 11-8

ENGINE NOISES, ODORS AND

VIBRATIONS 11-10

ENGINE ELECTRICAL SYSTEM 11-11

ENGINE COOLING SYSTEM 11-12

ENGINE EXHAUST SYSTEM 11-12

SECTION 2: DRIVE TRAIN 11-13

AUTOMATIC TRANSMISSION 11-13

MANUAL TRANSMISSION 11-13

CLUTCH 11-14

DIFFERENTIAL AND FINAL

DRIVE 11-14

TRANSFER ASSEMBLY 11-15

DRIVESHAFT 11-15

AXLES 11-15

OTHER DRIVE TRAIN

CONDITIONS 11-15

SECTION 3: BRAKE SYSTEM 11-16

BRAKE SYSTEM

TROUBLESHOOTING 11-16

SECTION 4: WHEELS, TIRES, STEERING

AND SUSPENSION 11-17

WHEELS AND WHEEL

BEARINGS 11-17

TIRES 11-17

STEERING 11-18

SUSPENSION 11-18

DRIVING NOISES AND

VIBRATIONS 11-18

SECTION 5: ELECTRICAL

ACCESSORIES 11-19

HEADLIGHTS 11-19

TAIL, RUNNING AND SIDE MARKER

LIGHTS 11-19

INTERIOR LIGHTS 11-20

BRAKE LIGHTS 11-20

WARNING LIGHTS 11-20

TURN SIGNAL AND 4-WAY HAZARD

LIGHTS 11-22

HORN 11-22

WINDSHIELD WIPERS 11-22

SECTION 6: INSTRUMENTS AND

GAUGES 11-23

SPEEDOMETER (CABLE

OPERATED) 11-23

SPEEDOMETER (ELECTRONICALLY OPERATED) 11-23 FUEL, TEMPERATURE AND OIL PRESSURE GAUGES 11-23 SECTION 7: CLIMATE CONTROL 11-23 AIR CONDITIONER 11-23 HEATER 11-24

