
## **REMOVAL AND INSTALLATION (Continued)**

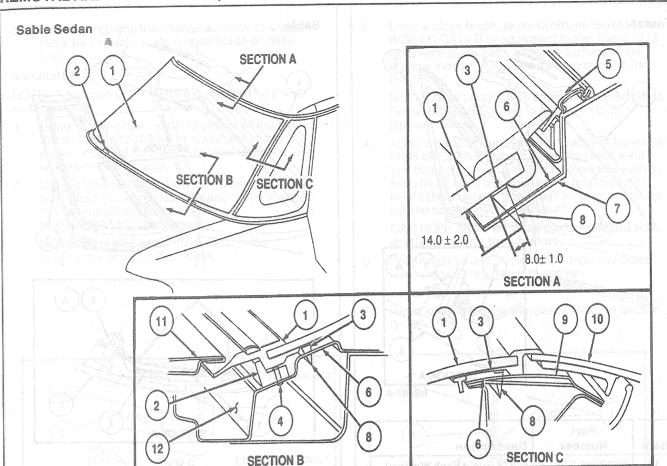

Item	Part Number	Description 18 (1993)
1	422A12	Window Assy
2	42310	Back Window Lower Stop (2 Reg'd)
3	WSB-M5B280-C2 (Red)	Urethane Glass Primer
	WSB-M2G314-B (Black)	Urethane Glass Primer
4	372820-S36B	Rivet (2 Req'd)
5		Roof Moulding Assy

(Continued)

	Part	
Item	Number	Description
6	WSB-M2G234-C	Urethane Body Primer (Black)
7		Roof Body Panel
8	WSB-M2G316-B	High Viscosity Urethane Adhesive
9		Quarter Panel
10		Quarter Window Assy
11		Luggage Compartment Deck
12		Package Tray Panel

## **Quarter Window**

Sedan

Removal and Installation

WARNING: SAFETY GLASSES AND GLOVES MUST BE WORN.

- 1. Remove roof side rear interior trim panel. Refer to Section 01-05.
- 2. Remove four nut and washer assemblies retaining quarter window.

3. Remove quarter window.

NOTE: If the window seal has been damaged, replace with new seal assembly.

4. To install, reverse Removal procedure. Tighten nut and washer assemblies to 1-2 N·m (9-18 lb-ft).

N9485-A