
REMOVAL AND INSTALLATION (Continued)


Switchesess emergent yluge stand here a priot

Window Switch

Removal and Installation

- Remove switch housing retaining screw and rotate housing up and out of armrest.
- Remove two connector retaining screws from bottom of switch housing.
- The switch is held in place by the electrical contact pins. Using a small screwdriver, carefully pry switch from connector.
- 4. To install, reverse Removal procedure.

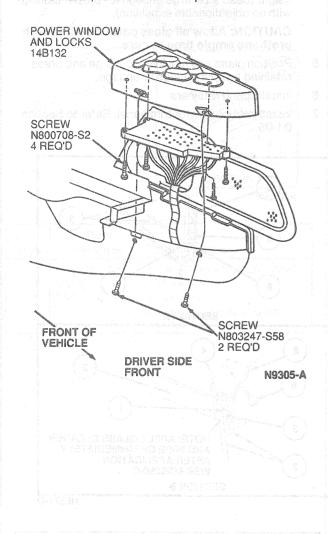

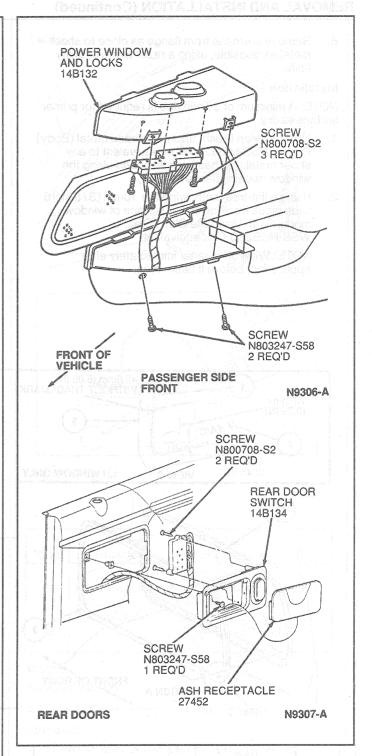

Window Switch Connector Wire

Removal and Installation

If replacement of the switch connector or a wire leading to the connector is necessary, the wire(s) can be removed from the connector without disassembling the connector.

- 1. Insert needle-like tool into edge of terminal hole.
- 2. Bend terminal in.