
REMOVAL AND INSTALLATION (Continued)

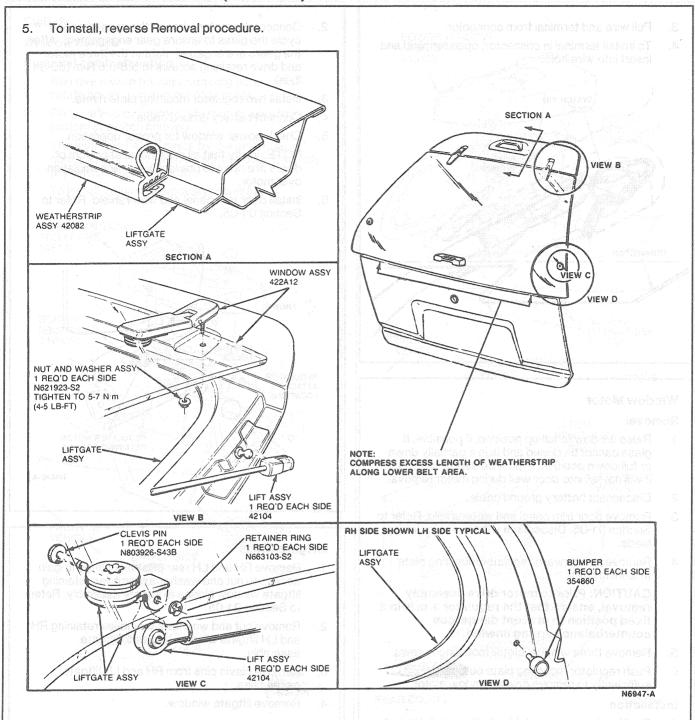

Defroster, Rear Control Assembly Removal and Installation

1. Remove cluster finish panel.

- 2. Disconnect electrical connector.
- 3. Depress spring locking tabs on switch and push out of finish panel.
- 4. To install, reverse Removal procedure.