# **REMOVAL AND INSTALLATION (Continued)**


# Transmitter Battery and a statement of the statement of t

### Replacement

The remote entry transmitter is powered by two coin-type 3-volt lithium batteries. To replace the batteries, the transmitter comes apart by twisting a thin coin between the two halves of the transmitter.

# CAUTION: Do not take the front half of the transmitter apart.

Carefully swing the contacts off the batteries and remove the old batteries. When installing the new batteries, be sure to place the positive side down as marked. Carefully swing the contacts back onto the top of the batteries. Snap the two halves back together.

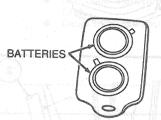




# SPECIAL SERVICE TOOLS AT SMALL AND ASSESSED.

## ROTUNDA EQUIPMENT

Model	lodel Description						
 014-00407	Digital Volt-Ohmmeter						
 059-00010	Dwell-Tach-Volt-Ohms Tester						

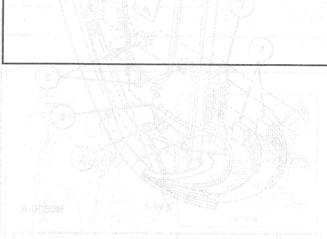

# Form Hundrer Desaription 1 18K602 Henrie Keyless Enry Modela Modela 2 14A488 Wring Henress Assembly 3 5000 82 Sovew 12 Neg di 4 Assembly Henress Assembly Heart of Assembly Heart Street of Assembly Herrets

MOTE: This vehicle sees an enternating lassociative. Wing hemess, DO MOT remove adating antenns ind

 Marian e targe ser units, not avec and invesmentals.