

## **REMOVAL AND INSTALLATION (Continued)**

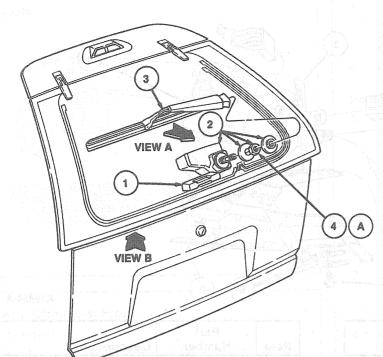

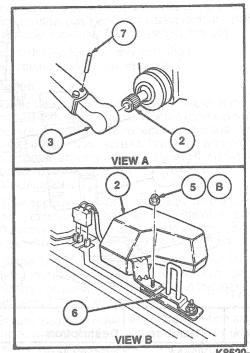

ltem	Part Number	Description
1	44409	Back Window Handle
2	17C541	Rear Window Wiper Motor Assy
3	17C403	Rear Arm and Blade Assy
4A	17A475	Nut

(Continued)

ltem	Part Number	Description
5B		Nut and Washer Assy
6	42148	Back Window Latch Striker Assy
7		1 / 16 Inch Diameter Roll Pin
Α		Tighten to 15-20 N·m (11-14 lb-ft)
В		Tighten to 5-8 N·m (4-6 lb-ft)

## Wiper Control Module (WCM)

The WCM is mounted on a bracket to the right of the steering column support bracket.

## Removal and Installation

1. Disconnect battery ground cable.

- 2. Disconnect harness connector.
- 3. Remove two retaining screws.
- 4. To install, reverse Removal procedure. Check wiper system operation.